

Template:FMB Security info

In security section user can see SIM card and configurator keyword security information.

- The state and status of the currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with a PIN code is used, the user can enter it in this section. The remaining attempts to enter the PIN code are shown as well.
- When the SIM PIN code is entered correctly, the user can change the PIN code or disable it from the SIM card. When the SIM PIN is disabled and the user would like to enable it again, previously used pin code must be entered.
- If two SIM cards are inserted into the device, the user can change the PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika configurator interface. At the top, there is a navigation bar with the Teltonika logo and several action buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. On the right side of the top bar, there is a device status icon and text indicating IMEI, FW 03.25.15 Rev: 1.0, and Configuration 6.1.17.0.

The main content area is divided into several sections:

- Device Info:** A table showing various device parameters:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	356623402601003	00:00:47	Not Charging 0%
- GNSS Info:** A sub-section with tabs for GSM Info, I/O Info, and Maintenance. It contains three sub-sections:
 - GNSS Status:**

Module Status	GNSS Packets
ON	32
Fix Status	Fix Time
No fix	00:00:00
 - Satellites:**

Visible:		In Use:	
GPS	GLONASS	GPS	GLONASS
4	0	0	0
BeiDou	Galileo	BeiDou	Galileo
0	0	0	0
Total In View		Total In Use	
4		0	
 - Location:**

Latitude/Longitude	Altitude	HDOP
0,0	0	0
Speed	Angle	PDOP
0 km/h	0°	0

*Please note that This feature will only show up in configurator when device is connected to a computer.