

# Template:FMC SMS events

SMS events functionality allows FMB1YX to send a configured SMS when an event is triggered. This event can be triggered by every I/O element.

When any of the I/O elements is triggered, FMB1YX sends a configured SMS message to a defined phone number. If SMS events are activated but there are no numbers defined in *GSM Predefined Numbers* list (similarly as in the picture below), then the device will not send any messages.



The sent SMS messages format is following:

"Date Time Current Coordinate Event Text"

For example, if FMB1YX is configured to send an SMS, when Ignition reaches high level while configured with *High priority* and event generation on both range entrance and exit (as shown on the figure below), then the sent SMS is:

"2017/06/13 13:52:18 Lon:25.255537 Lat:54.667193 Ignition 1"

The screenshot shows the configuration interface for a Teltonika FMC125 device. The top navigation bar includes buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. The main content area is a table titled 'I/O' with columns for 'Input Name', 'Units', 'Priority', 'Low Level', 'High Level', 'Event Only', 'Operand', 'Avg Const', 'Send SMS To', and 'SMS Text'. The 'Priority' column has sub-columns for 'None', 'Low', 'High', and 'Panic'. The 'Event Only' column has sub-columns for 'Crash', 'Yes', and 'No'. The 'Operand' column has a dropdown menu. The 'Send SMS To' column has a dropdown menu. The 'SMS Text' column has a dropdown menu. The table lists various I/O elements such as Ignition, Movement, Data Mode, GSM Signal, Sleep Mode, GNSS Status, GNSS PDOP, GNSS HDOP, External Voltage, Speed, GSM Cell ID, GSM Area Code, Battery Voltage, Battery Current, Active GSM Operator, Trip Odometer, Total Odometer, Digital Input 1, Analog Input 1, Digital Output 1, Fuel Used GPS, Fuel Rate GPS, Axis X, Axis Y, Axis Z, ICCID, Digital Input 2, Dallas Temperature 1, and Dallas Temperature 2.

The SMS Text field can be altered and any text can be entered. Maximum message length is 160 symbols (numbers, letters and symbols in ASCII, except for comma symbol ",").

If FMB1YX is in *Deep Sleep* mode and an SMS event occurs with *Low priority* (which does not wake up FMB1YX), then the device does not send the message. It is saved to device memory until it wakes up from *Deep Sleep* mode and GSM modem starts working normally. After it wakes up, all the messages that are saved to memory will be sent, but keep in mind that only 10 messages can be saved to memory - all other messages will not be saved, until there is free memory space.

