

[https://wiki.teltonika-gps.com/view/Template:FMM640\\_Ping\\_mode](https://wiki.teltonika-gps.com/view/Template:FMM640_Ping_mode)

# Template:FMM640 Ping mode

## **Ping mode**

User can enable and select how frequent device will send packets to inform server about active data link. It works when device did not send any records to server in defined time period.