

# Template:FMM SMS/Call settings

## SMS Data Sending

These settings allow sending AVL data using binary SMS. AVL data will be sent by SMS only when there is no GPRS connection. This setting does not affect replies to SMS request messages - answers are always sent back to the sender's telephone number.

The screenshot displays the Teltonika FMM125 configuration web interface. At the top, there is a navigation bar with the Teltonika logo and several utility buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. On the right side of the top bar, a small image of the FMM125 device is shown along with its specifications: IMEI 352000000000000, FW 01.00.00 Rev:00, and Configuration 1.00.0.0.

The main content area is divided into three sections:

- SMS Data Sending:** Contains a toggle switch for 'Allow SMS Data Sending' (currently set to 'Disable'), a 'Data Send Number' input field, and an 'SMS Commands' section with 'Login' and 'Password' input fields and an 'SMS Event Time Zone' dropdown menu set to 'UTC+00:00'.
- Incoming Call Settings:** Features an 'Incoming Call Action' section with two radio buttons: 'Do Nothing' (selected) and 'Hang-up', and a 'Report Position' checkbox.
- Authorized Numbers and GSM Predefined Numbers:** Two vertical lists of 20 numbered rows each. The 'Authorized Numbers' list has an 'Import CSV' and 'Export CSV' button at the bottom. The 'GSM Predefined Numbers' list also has 'Import CSV' and 'Export CSV' buttons at the bottom.

A left-hand sidebar contains a menu of configuration categories: Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings (highlighted), GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, 1-Wire, I/O, OBD II, and CAN Adapter. At the bottom of the interface, there are social media icons and a settings gear icon.

## SMS commands

Essential fields in *SMS/Call settings* are *Login* and *Password*. The login and password are used with every SMS sent to FMB1YX. If login and password are not set, in every SMS sent to FMB1YX device two spaces before command have to be used (<space><space><command>).

Command structure with set login and password:

<login><space><password><space><command>, for example: "asd 123 getgps"

Phone numbers have to be written in international standard, using "+" is optional but not necessary (in both cases number will be recognized, but when number is without "+" symbol, IDD Prefix will not be generated, which depends on location of the phone). If no numbers are entered, configuration and sending commands over SMS are allowed from all GSM numbers.