

# Template:FMP Device Family Trip/Odometer Parameter list

□

## Contents

- [1 Trip scenario parameters](#)
- [2 Advanced trip scenario parameters](#)
- [3 Odometer parameters](#)
- [4 Private/Business mode scenario parameters](#)
- [5 Weekly Schedule parameters](#)
- [6 Daylight saving scenario parameters](#)
- [7 Weekly schedule scenario parameters](#)

### Trip scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11800	UInt8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
11801	UInt8	1	0	1	0 - Disable 1 - Enable	Eventual records
11802	UInt8	0	0	1	0 - Continuous 1 - Between records	Mode
11803	UInt8	5	0	255	km/h	Start speed
11804	UInt16	60	0	65535	Seconds	Ignition off timeout
7031	UInt8	0	0	10	Phone number	Send SMS to
8031	String	"Trip"	0	160	Text	Sms text

### Advanced trip scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
700	UInt16	100	0	65535	0 - Disable	Eco score allowed events
11805	UInt8	0	0	1	0 - Disable 1 - Enable	Remember iButton

### Odometer parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		

11806	Uint8	0	0	2	0 - GNSS 1 - OBD 2 - LVCAN	Calculation source
11807	Uint32	0	0	4294967	Kilometer	Odometer Value

## Private/Business mode scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11850	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Private/Business Mode
11814	Uint8	0	0	1	0 - Disable 1 - Enable	Eventual records
11811	Uint8	0	0	3	16 - BTApp 32 - NBL-1 Button1 64 - NBL-1 Button2 128 - FMP100 Button 255 - Enable All	Triggers
11813	Uint8	0	0	3	0 - Normal 1 - Data sent as Zero 2 - Last good known position	GPS Data Masking
11815	Uint8	0	0	1	0 - Disable 1 - Enable	Odometer calculation
11816	Uint8	0	0	3	0 - Disable 1 - Towing detection 2 - Unplug detection 4 - Crash detection 8 - Autogeofence 15 - Enable All	Deactivate by
11849	Uint8	0	0	1	0 - External 1 - Weekly Schedule	Trigger Type

## Weekly Schedule parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11839	Uint16	0	-720	840	GMT+	Time Zone

## Daylight saving scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11840	Uint8	0	0	1	0 - Disable 1 - Enable	Daylight Saving
11841	Uint8	0	0	4	0 - First 1 - Second 2 - Third 3 - Fourth 4 - Fifth/Last	Start on DLS* week

<b>11842</b>	Uint8	1	1	12	1 - January 2 - February 3 - March 4 - April 5 - May 6 - June 7 - July 8 - August 9 - September 10 - October 11 - November 12 - December	Start on DLS* Month
<b>11843</b>	Uint8	0	0	6	0 - Monday 1 - Tuesday 2 - Wednesday 3 - Thursday 4 - Friday 5 - Saturday 6 - Sunday	Start on DLS* Day
<b>11844</b>	Uint16	0	0	1140	Minutes	Start on DLS* Time
<b>11845</b>	Uint8	0	0	4	0 - First 1 - Second 2 - Third 3 - Fourth 4 - Fifth/Last	End on DLS* Week
<b>11846</b>	Uint8	1	1	12	1 - January 2 - February 3 - March 4 - April 5 - May 6 - June 7 - July 8 - August 9 - September 10 - October 11 - November 12 - December	End on DLS* Month
<b>11847</b>	Uint8	0	0	6	0 - Monday 1 - Tuesday 2 - Wednesday 3 - Thursday 4 - Friday 5 - Saturday 6 - Sunday	End on DLS* Day
<b>11848</b>	Uint16	0	0	1140	Minutes	End on DLS* Time

## Weekly schedule scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11818</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Monday Status
<b>11819</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Monday Start Time
<b>11820</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Monday End Time
<b>11821</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Tuesday Status

<b>11822</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Tuesday Start Time
<b>11823</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Tuesday End Time
<b>11824</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Wednesday Status
<b>11825</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Wednesday Start Time
<b>11826</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Wednesday End Time
<b>11827</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Thursday Status
<b>11828</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Thursday Start Time
<b>11829</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Thursday End Time
<b>11830</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Friday Status
<b>11831</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Friday Start Time
<b>11832</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Friday End Time
<b>11833</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Saturday Status
<b>11834</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Saturday Start Time
<b>11835</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Saturday End Time
<b>11836</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Weekly Schedule Sunday Status
<b>11837</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Sunday Start Time
<b>11838</b>	Uint16	0	0	1140	Minutes	Weekly Schedule Sunday End Time

- - daylight saving