

# Template:FTX8XX/9XX Device Status

[Configuration](#) > Template:FTX8XX/9XX Device Status

Device Status displays information about the device. It also provides an option to update the device firmware version. [firmware errata](#)

## Device information

Device information	
Device name	FTC881
IMEI	<div></div>
Firmware version	0.26.0-rc.6 <div>Update</div>
Last start time	8/28/2023 1:45:07 PM
RTC time	8/28/2023 10:46:01 AM
Device uptime	53s
Power voltage	11333 mV.
Ext storage (used / total)	<div></div> 0 / 123 MB
Battery voltage	9210 mV.
Internal battery status	100% <div>Not charging</div>

**Device name** — Device Hardware name/model

**IMEI** — Device International Mobile Equipment Identity number.

**Firmware version**— current device firmware version.

**Last start time (UTC)** - Time when the device was turned on, GMT+0.

**RTC time (UTC)** - Device internal time, GMT+0.

**Device uptime** - Displays how long the device has been turned on.

**Power voltage** - Voltage level of the external power supply connected to the device.

**Ext storage (used / total)** - Indicates how much memory the devices have left to store records.

**Battery voltage** - Indicates the voltage of the internal battery in the device.

**internal battery status** - Display the internal battery level in percentage, as well as the current charging state of the battery.

# Cellular information



- Modem version** - The modem version of the GSM module
- Modem status** - Displays the status of the modem (ON/OFF/Sleep)
- Network status** - Displays the GPRS status of the device
- Current operator code** - Specified current SIM-card operator code.
- Signal Level** - Specifies the current signal strength of the connected network.

# GNSS information

GNSS information		
Check current status of GNSS module to make sure device mounted in correct place. Following information contains device location with all GNSS data and satellites in use.		
GNSS status		Location
GNSS version	AG3335A_V2.6.0.AG3335_20230720	
Module status	On	
GNSS packets	661987	
Fix status	Fix	
Time to first fix	26s	
Time to last fix	1s	
Satelites	Visible	In use
GPS	10	9
GLONASS	9	5
BeiDou	20	13
Galileo	8	8
IRNSS	0	0
Satelites	47	35

- GNSS version** - Displays the firmware version of the GNSS module.
- Module status** - Displays the modem status (ON/OFF/Sleep).

**GNSS packets** - The number of GNSS packets received by the GNSS receiver.

**Fix status** - Displays the status of the GNSS Fix.

**Time to first fix** - Specifies the time, in seconds, of how long it took the device to obtain a GNSS Fix from a cold start.

**Time to last fix** - Specifies the time, in seconds, of how long it took the device to obtain the most recent GNSS Fix.

**Satelites** - Displays the number of **Visible** and **In use** navigation satellites from different navigation systems

**Location** - Displays the information about current **Latitude/Longitude**, **Altitude**, **Speed** and **Angle** as well as the current device position on a map.