

# Template:How to TZ-BT

□

## Contents

- [1 How to read data from TZ-BT04/05/05B sensor with SAS\\_XYZ device](#)
  - [1.1 Solution applies for these SAS devices](#)
  - [1.2 Configuration](#)

## How to read data from TZ-BT04/05/05B sensor with SAS\_XYZ device

### Solution applies for these SAS devices



| [TMT250](#) | [GH5200](#) |

### Configuration

These are instructions on how to easily read data from **TZ-BT04/05/05B** Bluetooth LE sensor with **SAS\_XYZ** device.

First the SAS\_XYZ device Bluetooth settings need to be configured. These are the required steps:

- Press Bluetooth settings.
  - Turn on **BT Radio** by pressing **Enable (hidden)** or **Enable (visible)**.
- Press Bluetooth 4.0 settings.
  - Select TZ-BT04/05/05B sensor in **BLE connectionless functionalities** section.
  - Type your TZ-BT04/05/05B ID in ID field.
  - After all these steps press **Save to device** to save configuration.
  - To start BLE scan right away press **Discover BLE**.

More information about these settings can be found on [SAS\\_XYZ Bluetooth 4.0 Configuration modes](#)

page.

---



To check if the SAS\_XYZ device has already received data from **TZ-BT04/05/05B** Bluetooth LE sensor, follow these steps:

- Navigate to **Status** section.
- Press **I/O Info** and look if **BLE Temp**, **BLE Battery** and **BLE Humidity** has any values.