

# Template:MSP First start card



**MSP500 is a special tracking terminal with GNSS/GSM/Bluetooth connectivity, internal GNSS/GSM antennas, RS232 interface for ESC/POS printer support and internal Ni-Mh battery. Moreover, device contains integrated buzzer and relay for a speed limiting functionality based on a fuel pump power supply switching**



## Contents

- [1 Know your device](#)
- [2 How to insert Micro-SIM card and connect the battery](#)

## Know your device




## How to insert Micro-SIM card and connect the battery

1. Gently remove MSP500 **cover** using **plastic pry tool** from both sides.
2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in [Teltonika Configurator](#). Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Connect **battery** as shown to device. Position the battery in place where it does not obstruct other components.
4. After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **cover** back.

Device is ready to be installed.



 **Micro-SIM card insertion/removal must be performed when device is powered off - external voltage and internal battery disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**