

Template:SAS device Parameter list - AutoGeofence

Auto Geofence

Auto Geofence

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
20000	Uint8	0	0	3	0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority	Priority
20002	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
20001	Uint8	0	0	2	0 - On exiting zone 1 - On entering zone 2 - On both	Generate Event
20003	Uint8	60	0	65535	Seconds	Activation Timeout
20004	Uint16	100	5	1000000	Meters	Radius
20005	Uint8	0	0	2	0 - Power Voltage 1 - Digital Input1 2 - Engine RPM	Generate Event
7030	Uint64	""	0	10	Predefined Number	Send SMS to
8030	String	AutoGeofence	0	160	Text	SMS text
20006	Uint8	0	0	1	0 - Disable 1 - Enable	Call Settings
20007	Uint16	""	0	10	Predefined Number	Call to