

Template:SAS device Parameter list - E-scooter I/O

□

Contents

- [1 E-scooter I/O](#)
 - [1.1 Scooter Protocol](#)
 - [1.2 Scooter Baudrate](#)
 - [1.3 Scooter FW Update](#)
 - [1.4 E-Scooter I/O](#)

E-scooter I/O

Scooter Protocol

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
300	Uint16	254	0	254	0 - Segway ES 1 - M356 2 - Segway MAX 3 - FitRider 4 - Hergele 5 - Okai 254 - None	Protocol

Scooter Baudrate

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
152	Uint16	0	0	8	0 - Default (115200) 3 - 9600 4 - 14400 5 - 19200 6 - 38400 7 - 57600 8 - 115200	Baudrate

Scooter FW Update

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
301	Uint16	1	0	1	0 - Disable 1 - Enable	FW Update

E-Scooter I/O

Parameter ID	Parameter Type	Default value	Value range		Value	parameter	Input Name
			Min	Max			
51270	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Serial number
51274	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51271	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7330	UInt8	0	0	10	Predefined Number	Send SMS To	
8330	String	Serial Number	0	160	Predefined Number	SMS Text	
51280	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Master control FW version
51284	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51281	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7331	UInt8	0	0	10	Predefined Number	Send SMS To	
8331	String	Master control FW version	0	160	Predefined Number	SMS Text	
51290	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Error code
51293	UInt8	10	10	51	-	Low Level	
51292	UInt8	10	10	51	-	High Level	
51294	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51291	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7332	UInt8	0	0	10	Predefined Number	Send SMS To	
8332	String	Error Code	0	160	Predefined Number	SMS Text	
51300	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Alarm code
51303	UInt8	9	9	12	-	Low Level	
51302	UInt8	9	9	12	-	High Level	
51304	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51301	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7333	UInt8	0	0	10	Predefined Number	Send SMS To	
8333	String	Alarm Code	0	160	Predefined Number	SMS Text	

51320	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Lock status
51323	UInt8	0	0	0	-	Low Level	
51322	UInt8	0	0	1	-	High Level	
51324	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51321	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7335	UInt8	0	0	10	Predefined Number	Send SMS To	
8335	String	Lock status	0	160	Predefined Number	SMS Text	
51330	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Buzzer alarm status
51333	UInt8	0	0	0	-	Low Level	
51332	UInt8	0	0	1	-	High Level	
51334	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51331	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7336	UInt8	0	0	10	Predefined Number	Send SMS To	
8336	String	Buzzer alarm status	0	160	Predefined Number	SMS Text	
51340	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	External battery status
51343	UInt8	0	0	0	-	Low Level	
51342	UInt8	0	0	1	-	High Level	
51344	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51341	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7337	UInt8	0	0	10	Predefined Number	Send SMS To	
8337	String	External battery status	0	160	Predefined Number	SMS Text	
51370	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Current operation status
51373	UInt8	0	0	2	-	Low Level	
51372	UInt8	0	0	2	-	High Level	
51374	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51371	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7340	UInt8	0	0	10	Predefined Number	Send SMS To	
8340	String	Current operation mode	0	160	Predefined Number	SMS Text	

51380	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal Battery Voltage
51383	UInt8	0	0	42000	mV	Low Level	
51382	UInt8	0	0	42000	mV	High Level	
51384	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51381	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7341	UInt8	0	0	10	Predefined Number	Send SMS To	
8341	String	Internal Battery Voltage	0	160	Predefined Number	SMS Text	
51390	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	External Battery Voltage
51393	UInt8	0	0	42000	mV	Low Level	
51392	UInt8	0	0	42000	mV	High Level	
51394	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51391	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7342	UInt8	0	0	10	Predefined Number	Send SMS To	
8342	String	External Battery Voltage	0	160	Predefined Number	SMS Text	
51400	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal Battery Voltage
51403	UInt8	0	0	100	%	Low Level	
51402	UInt8	0	0	100	%	High Level	
51404	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51401	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7343	UInt8	0	0	10	Predefined Number	Send SMS To	
8343	String	Battery percentage	0	160	Predefined Number	SMS Text	

51410	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Actual remaining mileage
51413	UInt8	0	0	327670	m	Low Level	
51412	UInt8	0	0	327670	m	High Level	
51414	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51411	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7344	UInt8	0	0	10	Predefined Number	Send SMS To	
8344	String	Actual remaining mileage	0	160	Predefined Number	SMS Text	
51420	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Predicted remaining mileage
51423	UInt8	0	0	327670	m	Low Level	
51422	UInt8	0	0	327670	m	High Level	
51424	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51421	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7345	UInt8	0	0	10	Predefined Number	Send SMS To	
8345	String	Predicted remaining mileage	0	160	Predefined Number	SMS Text	
51430	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal Battery Voltage
51433	UInt8	0	0	255	km/h	Low Level	
51432	UInt8	0	0	255	km/h	High Level	
51434	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51431	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7346	UInt8	0	0	10	Predefined Number	Send SMS To	
8346	String	Scooter speed	0	160	Predefined Number	SMS Text	
51440	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Total mileage
51443	UInt8	0	0	2147483647	m	Low Level	
51442	UInt8	0	0	2147483647	m	High Level	
51444	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51441	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7347	UInt8	0	0	10	Predefined Number	Send SMS To	
8347	String	Total mileage	0	160	Predefined Number	SMS Text	

51450	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal Battery Voltage
51453	UInt8	0	0	327670	m	Low Level	
51452	UInt8	0	0	327670	m	High Level	
51454	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51451	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7348	UInt8	0	0	10	Predefined Number	Send SMS To	
8348	String	Single mileage	0	160	Predefined Number	SMS Text	
51460	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Total operation time
51463	UInt8	0	0	2147483647	s	Low Level	
51462	UInt8	0	0	2147483647	s	High Level	
51464	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51461	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7349	UInt8	0	0	10	Predefined Number	Send SMS To	
8349	String	Total operation time	0	160	Predefined Number	SMS Text	
51470	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Total riding time
51473	UInt8	0	0	2147483647	s	Low Level	
51472	UInt8	0	0	2147483647	s	High Level	
51474	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51471	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7350	UInt8	0	0	10	Predefined Number	Send SMS To	
8350	String	Total riding time	0	160	Predefined Number	SMS Text	
51480	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Single operation time
51483	UInt8	0	0	32767	s	Low Level	
51482	UInt8	0	0	32767	s	High Level	
51484	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51481	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7351	UInt8	0	0	10	Predefined Number	Send SMS To	
8351	String	Single operation time	0	160	Predefined Number	SMS Text	

51490	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Single riding time
51493	UInt8	0	0	32767	s	Low Level	
51492	UInt8	0	0	32767	s	High Level	
51494	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51491	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7352	UInt8	0	0	10	Predefined Number	Send SMS To	
8352	String	Single riding time	0	160	Predefined Number	SMS Text	
51500	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Body temperature
51503	UInt8	0	0	32767	°C x 10	Low Level	
51502	UInt8	0	0	32767	°C x 10	High Level	
51504	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51501	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7353	UInt8	0	0	10	Predefined Number	Send SMS To	
8353	String	Body temperature	0	160	Predefined Number	SMS Text	
51510	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal battery temperature 1
51513	UInt8	0	0	32767	°C x 10	Low Level	
51512	UInt8	0	0	32767	°C x 10	High Level	
51514	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51511	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7354	UInt8	0	0	10	Predefined Number	Send SMS To	
8354	String	Internal battery temperature 1	0	160	Predefined Number	SMS Text	
51520	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Body temperature
51523	UInt8	0	0	32767	°C x 10	Low Level	
51522	UInt8	0	0	32767	°C x 10	High Level	
51524	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51521	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7355	UInt8	0	0	10	Predefined Number	Send SMS To	
8355	String	Internal battery temperature 2	0	160	Predefined Number	SMS Text	

51530	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	External battery temperature 1
51533	UInt8	0	0	32767	°C x 10	Low Level	
51532	UInt8	0	0	32767	°C x 10	High Level	
51534	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51531	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7356	UInt8	0	0	10	Predefined Number	Send SMS To	
8356	String	External battery temperature 1	0	160	Predefined Number	SMS Text	
51550	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	External battery temperature 2
51553	UInt8	0	0	32767	°C x 10	Low Level	
51552	UInt8	0	0	32767	°C x 10	High Level	
51554	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51551	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7358	UInt8	0	0	10	Predefined Number	Send SMS To	
8358	String	External battery temperature 2	0	160	Predefined Number	SMS Text	
51540	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Supply voltage
51543	UInt8	0	0	42000	mV	Low Level	
51542	UInt8	0	0	42000	mV	High Level	
51544	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51541	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7357	UInt8	0	0	10	Predefined Number	Send SMS To	
8357	String	Supply voltage	0	160	Predefined Number	SMS Text	
51570	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Average speed
51573	UInt8	0	0	65535	km/h	Low Level	
51572	UInt8	0	0	65535	km/h	High Level	
51574	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51571	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7360	UInt8	0	0	10	Predefined Number	Send SMS To	
8360	String	Average speed	0	160	Predefined Number	SMS Text	

51580	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	External battery FW version
51584	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51581	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7361	UInt8	0	0	10	Predefined Number	Send SMS To	
8361	String	External battery FW version	0	160	Predefined Number	SMS Text	
51590	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal battery FW version
51594	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51591	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7362	UInt8	0	0	10	Predefined Number	Send SMS To	
8362	String	Internal battery FW version	0	160	Predefined Number	SMS Text	
51600	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Body temperature
51604	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51601	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7363	UInt8	0	0	10	Predefined Number	Send SMS To	
8363	String	Instrument panel FW version	0	160	Predefined Number	SMS Text	
51620	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Internal battery capacity
51623	UInt8	0	0	100	%	Low Level	
51622	UInt8	100	0	100	%	High Level	
51624	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51621	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7365	UInt8	0	0	10	Predefined Number	Send SMS To	
8365	String	Int Bat Capacity	0	160	Predefined Number	SMS Text	

51630	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	External battery capacity
51633	UInt8	0	0	100	%	Low Level	
51632	UInt8	100	0	100	%	High Level	
51634	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51631	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7366	UInt8	0	0	10	Predefined Number	Send SMS To	
8366	String	Ext Bat Capacity	0	160	Predefined Number	SMS Text	
51350	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Charging Status
51353	UInt8	0	0	0	-	Low Level	
51352	UInt8	1	0	1	-	High Level	
51354	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51351	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7338	UInt8	0	0	10	Predefined Number	Send SMS To	
8338	String	Charging status	0	160	Predefined Number	SMS Text	
52680	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Normal speed limit
52683	UInt8	5	5	30	-	Low Level	
52682	UInt8	30	5	30	-	High Level	
52684	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
52681	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7471	UInt8	0	0	10	Predefined Number	Send SMS To	
8471	String	Normal speed limit	0	160	Predefined Number	SMS Text	
52690	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Eco speed limit
52693	UInt8	5	5	30	-	Low Level	
52692	UInt8	30	5	30	-	High Level	
52694	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
52691	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7472	UInt8	0	0	10	Predefined Number	Send SMS To	
8472	String	Eco speed limit	0	160	Predefined Number	SMS Text	

52700	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Sport speed limit
52703	UInt8	5	5	30	-	Low Level	
52702	UInt8	30	5	30	-	High Level	
52704	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
52701	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7473	UInt8	0	0	10	Predefined Number	Send SMS To	
8473	String	Sport speed limit	0	160	Predefined Number	SMS Text	
52710	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Battery lock Status
52713	UInt8	0	0	1	-	Low Level	
52712	UInt8	1	0	1	-	High Level	
52714	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
52711	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7474	UInt8	0	0	10	Predefined Number	Send SMS To	
8474	String	Battery lock Status	0	160	Predefined Number	SMS Text	
52720	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Cable lock Status
52723	UInt8	0	0	1	-	Low Level	
52722	UInt8	1	0	1	-	High Level	
52724	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
52721	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7475	UInt8	0	0	10	Predefined Number	Send SMS To	
8475	String	Cable lock Status	0	160	Predefined Number	SMS Text	
51650	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Cable lock FW version
51654	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
51651	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7368	UInt8	0	0	10	Predefined Number	Send SMS To	
8368	String	Cable lock FW version	0	160	Predefined Number	SMS Text	