

Template:SAS device Parameter list - Features

□

Contents

- [1 Features](#)
 - [1.1 Eco/Green Driving](#)
 - [1.2 Jamming](#)
 - [1.3 Unauthorized movement](#)
 - [1.4 Over speeding](#)
 - [1.5 Alarm](#)
 - [1.6 Additional features](#)
 - [1.7 Power Off/On](#)
 - [1.8 ManDown](#)
 - [1.9 Last Known Position](#)
 - [1.10 Unplug Detection](#)
 - [1.11 SIM Card Tamper Protection](#)
 - [1.12 Event Notification](#)
 - [1.12.1 SMS Settings](#)
 - [1.12.2 Call Settings](#)
 - [1.13 Movement Event](#)
 - [1.14 DOUT Control Via Call](#)
 - [1.15 Immobilizer](#)
 - [1.16 iButton Read Notification](#)
 - [1.17 DOUT Control Via Ignition](#)
 - [1.18 Bluetooth Home Zone Settings](#)
 - [1.19 EYE Sensors filtered by Name List](#)
 - [1.19.1 Data Clear Period](#)
 - [1.19.2 RSSI](#)
 - [1.19.3 Record Period parameters](#)
 - [1.19.4 EYE Sensor Settings](#)
 - [1.19.5 EYE Name List](#)
 - [1.20 Amber Alert](#)
 - [1.21 Proximity Settings](#)
 - [1.22 Lockdown Indication Settings](#)
 - [1.23 Last Known Position](#)
 - [1.24 Tamper detection bracelet](#)

Features

Eco/Green Driving

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|-------|----------------|
| | | | Min | Max | | |

| | | | | | | |
|--------------|--------|---------------|-----|------|--|----------------------------|
| 11000 | Uint16 | 0 | 0 | 3 | 0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority | Scenario Settings |
| 11004 | Uint8 | 2,2 | 0,5 | 10 | m/s ² | Max acceleration |
| 11005 | Uint8 | 2,5 | 0,5 | 10 | m/s ² | Max Braking |
| 11006 | Uint8 | 2,1 | 0,5 | 10 | rad/s | Max Cornering |
| 11007 | Uint16 | 0 | 0 | 1 | 0 - GPS 1 - Accelerometer | Source |
| 11008 | Uint16 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Eco/Green Driving Duration |
| 11003 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | Output Control |
| 11001 | Uint8 | 200 | 100 | 5000 | milliseconds | DOUT ON Duration |
| 11002 | Uint8 | 200 | 0 | 5000 | milliseconds | DOUT OFF Duration |
| 7034 | Uint16 | "" | 0 | 10 | Predefined number | Send SMS to |
| 8034 | String | Green Driving | 0 | 160 | Char | SMS text |

Jamming

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|--|------------------------------------|
| | | | Min | Max | | |
| 11300 | Uint8 | 0 | 0 | 3 | 0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority | Scenario Settings |
| 11303 | Uint8 | 1 | 0 | 1 | 0 - Disable 1 - Enable | Eventual Records |
| 11305 | Uint8 | 60 | 0 | 65535 | Seconds | Time until Jamming Event Detection |

Unauthorized movement

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|-----------------------|-------------|-----|--|-------------------|
| | | | Min | Max | | |
| 11720 | Uint8 | 0 | 0 | 3 | 0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority | Scenario Settings |
| 11721 | Uint8 | 0 | 0 | 1 | 0 - On Exit 1 - On Entrance 2 - On Both | UGenerate aven |
| 11722 | Uint8 | 1 | 0 | 30 | Seconds | Pre-alarm timeout |
| 11723 | Uint8 | 1 | 0 | 30 | Seconds | Time to Stable |
| 11724 | Uint8 | 1 | 1 | 5 | Seconds | Buzzer ON |
| 11725 | Uint8 | 5 | 2 | 30 | Seconds | Buzzer period |
| 7729 | Uint16 | "" | 0 | 10 | Predefined number | Send SMS to |
| 8729 | String | Unauthorized movement | 0 | 160 | Char | SMS Text |

Over speeding

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|-------|----------------|
| | | | Min | Max | | |

| | | | | | | |
|-------|--------|--------------|-----|------|--|-------------------|
| 11100 | Uint8 | 0 | 0 | 3 | 0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority | Scenario Settings |
| 11104 | Uint32 | 90 | 0 | 6 | km/h | Max speed |
| 11103 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | Output Control |
| 11101 | Uint8 | 200 | 100 | 5000 | milliseconds | DOUT ON Duration |
| 11102 | Uint8 | 200 | 0 | 5000 | milliseconds | DOUT OFF Duration |
| 7032 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8032 | String | Overspeeding | 0 | 160 | Char | SMS Text |

Alarm

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|------------------------|----------------|
| | | | Min | Max | | |
| 7245 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8245 | String | Alarm | 0 | 160 | Char | SMS Text |
| 11711 | Uint8 | 0 | 0 | 1 | 0 - Call 1 - Record | Order priority |
| 11712 | Uint16 | "" | 0 | 10 | Predefined Number | Call to |

Additional features

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|------------|--------|----------------|
| | | | Min | Max | | |
| 251 | Uint32 | 0 | 0 | 4294967295 | number | User ID |

Power Off/On

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|-----------------------------|-------------|-----|---------------------------|--------------------|
| | | | Min | Max | | |
| 13086 | Uint8 | "" | 0 | 2 | 0 - Disable 1 - Enable | Event On Power Off |
| 7310 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8310 | String | Power! Val %val IM %imei | 0 | 160 | Char | SMS Text |

ManDown

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|---|---------------------------------------|
| | | | Min | Max | | |
| 12100 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Scenario Settings |
| 127 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Mandown/No/Movement while charging |
| 12110 | Uint8 | 1 | 0 | 2 | 0 - On Exit 1 - On Entrance 2 - On both | Generate event |
| 12101 | Uint8 | 0 | 0 | 1 | 0 - Horizontal 1 - Vertical | Position |
| 12102 | Uint32 | 60 | 30 | 150 | Degrees | Angle |
| 12111 | Uint32 | 5 | 0 | 600 | Seconds | Silent pre-alarm delay |
| 12103 | Uint32 | 3 | 0 | 65500 | Seconds | Pre-alarm timeout |
| 7222 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8222 | String | ManDown | 0 | 160 | Char | SMS Text |
| 12104 | Uint8 | 0 | 0 | 1 | 0 - Call 1 - Record | Order priority |

12105

Uint16

""

0

10

Predefined Number

Call to

Last Known Position

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---------------------------|-------------------|
| | | | Min | Max | | |
| 51720 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Scenario Settings |

Unplug Detection

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|--|-----------------------|
| | | | Min | Max | | |
| 11500 | Uint8 | 0 | 0 | 3 | 0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority | Scenario Settings |
| 11501 | Uint8 | 1 | 0 | 1 | 0 - Disable 1 - Enable | Eventual Records |
| 11502 | Uint8 | 0 | 0 | 1 | 0 - Simple 1 - Advanced | Unplug Detection Mode |
| 11504 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Buzzer Control |
| 11505 | Uint8 | 200 | 0 | 65535 | Seconds | Buzzer ON duration |
| 7036 | Uint16 | "" | 0 | 10 | Predefined number | Send SMS to |
| 8036 | String | Unplug | 0 | 160 | Char | SMS Text |

SIM Card Tamper Protection

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|------|---------------------------|--------------------------------------|
| | | | Min | Max | | |
| 11730 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Enable/Disable SIM Tamper Protection |
| 11731 | Uint8 | 0 | 0 | 3600 | Seconds | ICCID |

Event Notification

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---|--------------------|
| | | | Min | Max | | |
| 13053 | Uint8 | "" | 0 | 7 | 0 - None 1 - Alarm 2 - ManDown 3 - ManDown & Alarm 4 - Movement Event 5 - Movement Event & Alarm 6 - Movement Event & ManDown 7 - Movement Event & ManDown & Alarm | Event Notification |
| 60257 | Uint8 | 0 | 0 | 1 | 0 - GPRS or SMS 1 - GPRS and SMS | SMS sending method |

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|-------|----------------|
| | | | Min | Max | | |

| | | | | | | |
|-------|--------|-----------|---|-----|---|--------------------------|
| 13059 | Uint8 | "" | 0 | 1 | 0 - Nobody 1 - Number 2 2 - Number 2 + Number 3 3 - Number 2 + Number 3 + Number 4 4 - Number 2 + Number 3 + Number 4 + Number 5 5 - Number 3 6 - Number 3 + Number 4 7 - Number 3 + Number 4 + Number 5 8 - Number 4 9 - Number 4 + Number 5 10 - Number 5 | Call After Answer |
| 13055 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Inform When Answered |
| 13057 | String | Answered | 0 | 160 | Char | SMS Text |
| 13056 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Inform When Not Answered |
| 13058 | String | No answer | 0 | 160 | Char | SMS Text |

SMS Settings

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|-------------------|----------------|
| | | | Min | Max | | |
| 13060 | Uint16 | "" | 0 | 10 | Predefined Number | SMS Number 1 |
| 13061 | Uint16 | "" | 0 | 10 | Predefined Number | SMS Number 2 |
| 13062 | Uint16 | "" | 0 | 10 | Predefined Number | SMS Number 3 |
| 13063 | Uint16 | "" | 0 | 10 | Predefined Number | SMS Number 4 |
| 13064 | Uint16 | "" | 0 | 10 | Predefined Number | SMS Number 5 |

Call Settings

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|-------------------|---------------------|
| | | | Min | Max | | |
| 13080 | Uint16 | "" | 0 | 10 | Predefined Number | Call Number 1 |
| 13081 | Uint16 | "" | 0 | 10 | Predefined Number | Call Number 2 |
| 13082 | Uint16 | "" | 0 | 10 | Predefined Number | Call Number 3 |
| 13083 | Uint16 | "" | 0 | 10 | Predefined Number | Call Number 4 |
| 13084 | Uint16 | "" | 0 | 10 | Predefined Number | Call Number 5 |
| 13066 | Uint32 | 5 | 5 | 300 | Seconds | Call Answer Timeout |
| 13054 | Uint32 | 1 | 1 | 10 | Number | Call repeat |

Movement Event

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|---|-------------------|
| | | | Min | Max | | |
| 12106 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Scenario Settings |
| 12108 | Uint8 | 0 | 0 | 1 | 0 - Movement Event 1 - No Movement Event | Mode |
| 12107 | Uint32 | 30 | 30 | 65500 | Seconds | Timeout |
| 7294 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |

8294 String Movement Event 0 160 Char SMS Text

DOUT Control Via Call

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|------------|------------------------------------|-------------------|
| | | | Min | Max | | |
| 12000 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | Scenario Settings |
| 12002 | Uint8 | 5 | 0 | 2147483648 | seconds | Duration Timeout |

Immobilizer

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|--|----------------------|
| | | | Min | Max | | |
| 11700 | Uint16 | 0 | 0 | 3 | 0 - Disable 1 - Low Priority 2 - High Priority 3 - Panic Priority | Scenario Settings |
| 11701 | Uint16 | 1 | 0 | 1 | 0 - Disable 1 - Enable | Eventual Records |
| 11702 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | Output Control |
| 11703 | Uint16 | 0 | 0 | 1 | 0 - Disable 1 - Enable | iButton List Check |
| 11709 | Uint16 | 1 | 0 | 1 | 0 - Disable 1 - Enable | Depend on Ignition |
| 7140 | Uint16 | "" | 0 | 10 | Predefined number | Send SMS to |
| 8140 | String | Immobilizer | 0 | 160 | Char | SMS text |
| 60068 | Uint8 | 30 | 1 | 65535 | Seconds | Ignition Off Timeout |

iButton Read Notification

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|------|------------------------------------|--------------------|
| | | | Min | Max | | |
| 11704 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | Output Control |
| 11705 | Uint8 | 200 | 100 | 5000 | Miliseconds | DOUT ON Duration |
| 11706 | Uint16 | 0 | 0 | 1 | 0 - Disable 1 - Enable | iButton List Check |
| 11707 | Uint16 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Depend On Ignition |

DOUT Control Via Ignition

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|------------------------------------|------------------------------|
| | | | Min | Max | | |
| 13401 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | DOUT Control |
| 13402 | Uint16 | 0 | 0 | 2 | 0 - None 1 - DOUT1 2 - DOUT2 | DOUT Deactivation Via DIN |
| 13403 | Uint8 | 5 | 0 | 65500 | Seconds | Ignition Off Timeout |

Bluetooth Home Zone Settings

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|-----------------|-------------|-------|---|---------------------|
| | | | Min | Max | | |
| 322 | Uint8 | 0 | 0 | 3 | 0 - None 1 - ELA MOV 2 - Ela Sensors 3 - Beacons | BLE Geofence |
| 324 | Uint8 | -60 | -100 | 0 | dBm | Home Zone RSSI |
| 329 | Uint8 | 60 | 40 | 65535 | Seconds | Time-without-beacon |
| 325 | Uint8 | 0 | 0 | 2 | 0 - On Exit 1 - On Entrance 2 - On both | Generate Event |
| 326 | Uint16 | "" | 0 | 10 | Predefined Number | Make Call To |
| 7470 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8470 | String | Home Zone Alarm | 0 | 160 | Char | SMS Text |

EYE Sensors filtered by Name List

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---|----------------------|
| | | | Min | Max | | |
| 70076 | Uint8 | 0 | 0 | 3 | 0 - Disabled 1 - Custom Sensors 2 - EYE Sensors 3 - Custom and EYE Sensors | Sensor Configuration |
| 70077 | Uint8 | 0 | 0 | 3 | 0 - Disabled 1 - Name 2 - MAC 3 - Name and MAC | EYE Sensor Filter |

Data Clear Period

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|---|-------------------|
| | | | Min | Max | | |
| 70057 | Uint16 | 10 | 0 | 65535 | Defines period in seconds, for how long sensor has to be not detected in order to remove it from EYE Sensor List. | Data clear period |

RSSI

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|------|---|-------------------|
| | | | Min | Max | | |
| 70005 | Int8 | 0 | 0 | -100 | Defines period in seconds, for how long sensor has to be not detected in order to remove it from EYE Sensor List. | Data clear period |

Record Period parameters

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|-------|----------------|
| | | | Min | Max | | |

| | | | | | | |
|-----|--------|----|---|---------|--|---------|
| 258 | Uint32 | 60 | 0 | 2592000 | Defines how often to create EYE Sensor List records while vehicle is moving in seconds | On Move |
| 259 | Uint32 | 60 | 0 | 2592000 | Defines how often to create EYE Sensor List records while vehicle is not moving in seconds | On Stop |

EYE Sensor Settings

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---|----------------------|
| | | | Min | Max | | |
| 70067 | Bool | 0 | 0 | 1 | Includes temperature value, received from EYE Sensor | Temperature |
| 70068 | Bool | 0 | 0 | 1 | Includes humidity value, received from EYE Sensor | Humidity |
| 70069 | Bool | 0 | 0 | 1 | Includes magnetic field presence value around EYE sensor | Magnet |
| 70083 | Bool | 0 | 0 | 1 | Includes value, which represents how many times EYE Sensor has detected magnetic sensor trigger | Magnet Trigger Count |
| 70070 | Bool | 0 | 0 | 1 | Includes movement value, which displays if EYE Sensor is detecting movement | Movement |
| 70071 | Bool | 0 | 0 | 1 | Includes value, which represents how many times EYE Sensor has detected movement | Movement Count |
| 70072 | Bool | 0 | 0 | 1 | Includes pitch value, received from EYE Sensor accelerometer | Pitch |
| 70073 | Bool | 0 | 0 | 1 | Includes roll value, received from EYE Sensor accelerometer | Roll |
| 70074 | Bool | 0 | 0 | 1 | Includes low battery value received from EYE Sensor. | Low Battery |
| 70075 | Bool | 0 | 0 | 1 | Includes EYE Sensor battery voltage | Battery Voltage |

EYE Name List

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|---------------|----------------|---------------|-------------|-----|--|----------------|
| | | | Min | Max | | |
| 70006...70030 | Char | - | 0 | 10 | Configure up to 50 different EYE Sensor Name filters | EYE Name List |

Amber Alert

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|---------|----------------|
| | | | Min | Max | | |
| 601 | Uint8 | 1800 | 0 | 86400 | Seconds | Timeout |

| | | | | | | |
|------|--------|--|---|-------|---------------------------|-----------------------------|
| 602 | Uint8 | 300 | 0 | 86400 | Seconds | Pre-Alarm |
| 603 | Uint8 | 0 | 0 | 1 | 0 - Call 1 - Record | Order Priority |
| 607 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Deactivate after alarm call |
| 605 | Uint16 | "" | 0 | 10 | Predefined Number | Initial call number |
| 606 | Uint16 | "" | 0 | 10 | Predefined Number | Alarm call number |
| 7339 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8339 | String | %date %datetime Lon %flon LatP %flat Amber Alert Val %val Timeout %param601 | 0 | 160 | Char | SMS Text |

Proximity Settings

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---------------------------|---------------------------------------|
| | | | Min | Max | | |
| 327 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Proximity detection |
| 1116 | Uint8 | 0 | 0 | 255 | - | Proximity Group ID |
| 328 | Uint8 | -60 | -100 | 0 | dBm | Proximity RSSI |
| 331 | Uint8 | 0 | 0 | 20 | - | Proximity RSSI exit threshold |
| 332 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Proximity RSSI moving average enable |
| 333 | Uint8 | 5 | 0 | 60 | - | Proximity RSSI moving average samples |
| 330 | Uint8 | 1 | 0 | 1 | 0 - Disable 1 - Enable | Proximity while charging |
| 7471 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8471 | String | Proximity | 0 | 160 | Char | SMS Text |

Lockdown Indication Settings

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-------|---------|----------------|
| | | | Min | Max | | |
| 323 | Uint8 | 30 | 0 | 65500 | Seconds | Pre-Alarm |

Last Known Position

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---------------------------|-------------------|
| | | | Min | Max | | |
| 51720 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Scenario Settings |

Tamper detection bracelet

| Parameter ID | Parameter Type | Default value | Value range | | Value | Parameter name |
|--------------|----------------|---------------|-------------|-----|---------------------------|------------------|
| | | | Min | Max | | |
| 321 | Uint8 | 0 | 0 | 1 | 0 - Disable 1 - Enable | Tamper Detection |
| 320 | Uint16 | "" | 0 | 10 | Predefined Number | Call to |
| 7475 | Uint16 | "" | 0 | 10 | Predefined Number | Send SMS to |
| 8475 | String | Tamper | 0 | 160 | Char | SMS Text |