

# Template:SAS device Parameter list - I/O

## I/O

Parameter ID	Parameter Type	Default value	Value range		Value	parameter	Input Name
			Min	Max			
50000	Uint8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Ignition</b>
50003	Uint8	0	0	0	-	Low Level	
50002	Uint8	0	0	1	-	High Level	
50004	Uint8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50001	Uint8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50005	Uint16	10	0	65535	-	Average Const	
7000	Uint8	0	0	10	Predefined Number	Send SMS To	
8000	String	Ignition	0	160	Predefined Number	SMS Text	
50010	Uint8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Movement</b>
50013	Uint8	0	0	0	-	Low Level	
50012	Uint8	0	0	1	-	High Level	
50014	Uint8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50011	Uint8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50015	Uint16	10	0	65535	-	Average Const	
7001	Uint8	0	0	10	Predefined Number	Send SMS To	
8001	String	Movement	0	160	Predefined Number	SMS Text	
50020	Uint8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Data Mode</b>
50023	Uint8	0	0	0	-	Low Level	
50022	Uint8	0	0	5	-	High Level	
50024	Uint8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50021	Uint8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7002	Uint8	0	0	10	Predefined Number	Send SMS To	
8002	String	Data Mode	0	160	Predefined Number	SMS Text	

<b>50030</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>GSM Signal</b>
<b>50033</b>	UInt8	0	0	0	-	Low Level	
<b>50032</b>	UInt8	0	0	5	-	High Level	
<b>50034</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50031</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50035</b>	UInt16	7	0	65535	-	Average Const	
<b>7003</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8003</b>	String	GSM Signal	0	160	Predefined Number	SMS Text	
<b>50040</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Sleep Mode</b>
<b>50043</b>	UInt8	0	0	0	-	Low Level	
<b>50042</b>	UInt8	0	0	3	-	High Level	
<b>50044</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50041</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7004</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8004</b>	UInt8	Sleep mode	0	160	Predefined Number	SMS Text	
<b>50050</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>GNSS Status</b>
<b>50053</b>	UInt8	0	0	0	-	Low Level	
<b>50052</b>	UInt8	0	0	5	-	High Level	
<b>50054</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50051</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7005</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8005</b>	String	GNSS Power	0	160	Predefined Number	SMS Text	

<b>50060</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>GNSS PDOP</b>
<b>50063</b>	UInt8	0	0	0	-	Low Level	
<b>50062</b>	UInt8	0	0	1000	-	High Level	
<b>50064</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50061</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50065</b>	UInt16	10	0	65535	-	Average Const	
<b>7006</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8006</b>	String	GNSS PDOP	0	160	Predefined Number	SMS Text	
<b>50070</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>GNSS HDOP</b>
<b>50073</b>	UInt8	0	0	0	-	Low Level	
<b>50072</b>	UInt8	0	0	1000	-	High Level	
<b>50074</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50071</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50075</b>	UInt16	10	0	65535	-	Average Const	
<b>7007</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8007</b>	String	GNSS HDOP	0	160	Predefined Number	SMS Text	
<b>52310</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>User ID</b>
<b>52314</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
<b>52311</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7434</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8434</b>	String	User ID	0	160	Predefined Number	SMS Text	

<b>50080</b>	Uint8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>External Voltage</b>
<b>50083</b>	Uint8	0	0	60000	mV	Low Level	
<b>50082</b>	Uint8	0	0	60000	mV	High Level	
<b>50084</b>	Uint8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50081</b>	Uint8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50085</b>	Uint16	10	0	65535	-	Average Const	
<b>7008</b>	Uint8	0	0	10	Predefined Number	Send SMS To	
<b>8008</b>	String	External Voltage	0	160	Predefined Number	SMS Text	
<b>50090</b>	Uint8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Speed</b>
<b>50093</b>	Uint8	0	0	0	Km/h	Low Level	
<b>50092</b>	Uint8	0	0	300	Km/h	High Level	
<b>50094</b>	Uint8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50091</b>	Uint8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50095</b>	Uint16	1	0	65535	-	Average Const	
<b>7009</b>	Uint8	0	0	10	Predefined Number	Send SMS To	
<b>8009</b>	String	Speed	0	160	Predefined Number	SMS Text	
<b>50100</b>	Uint8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>GSM Cell ID</b>
<b>50103</b>	Uint8	0	0	0	-	Low Level	
<b>50102</b>	Uint8	0	0	999999	-	High Level	
<b>50104</b>	Uint8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50101</b>	Uint8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7010</b>	Uint8	0	0	10	Predefined Number	Send SMS To	
<b>8010</b>	String	GSM Cell ID	0	160	Predefined Number	SMS Text	

50110	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>GSM Area Code</b>
50113	UInt8	0	0	0	-	Low Level	
50112	UInt8	0	0	999999	-	High Level	
50114	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50111	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7011	UInt8	0	0	10	Predefined Number	Send SMS To	
8011	String	GSM Area Code	0	160	Predefined Number	SMS Text	
50120	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Battery Voltage</b>
50123	UInt8	0	0	5000/11000 (LiPo/NiMh)	mV	Low Level	
50122	UInt8	0	0	5000/11000 (LiPo/NiMh)	mV	High Level	
50124	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50121	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50125	UInt16	10	0	65535	-	Average Const	
7012	UInt8	0	0	10	Predefined Number	Send SMS To	
8012	String	Battery Voltage	0	160	Predefined Number	SMS Text	
50130	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Battery Current</b>
50133	UInt8	0	0	0	mA	Low Level	
50132	UInt8	0	0	5000	mA	High Level	
50134	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50131	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50135	UInt16	10	0	65535	-	Average Const	
7013	UInt8	0	0	10	Predefined Number	Send SMS To	
8013	String	Battery Current	0	160	Predefined Number	SMS Text	

<b>50690</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Battery level %</b>
<b>50693</b>	UInt8	0	0	100	%	Low Level	
<b>50692</b>	UInt8	0	0	100	%	High Level	
<b>50694</b>	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
<b>50691</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7243</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8243</b>	String	Battery Level %	0	160	Predefined Number	SMS text	
<b>50140</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Active GSM Operator</b>
<b>50143</b>	UInt8	0	0	0	-	Low Level	
<b>50142</b>	UInt8	0	0	9999999	-	High Level	
<b>50144</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50141</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7014</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8014</b>	String	Active GSM Operator	0	160	Predefined Number	SMS Text	
<b>50150</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Trip Odometer</b>
<b>50153</b>	UInt8	0	0	2147483646	m	Low Level	
<b>50152</b>	UInt8	0	0	2147483646	m	High Level	
<b>50154</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50151</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7015</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8015</b>	String	Trip Odometer	0	160	Predefined Number	SMS Text	

<b>50160</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Total Odometer</b>
<b>50163</b>	UInt8	0	0	2147483646	m	Low Level	
<b>50162</b>	UInt8	0	0	2147483646	m	High Level	
<b>50164</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50161</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7016</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8016</b>	String	Total Odometer	0	160	Predefined Number	SMS Text	
<b>50170</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Digital Input 1</b>
<b>50173</b>	UInt8	0	0	0	-	Low Level	
<b>50172</b>	UInt8	0	0	1	-	High Level	
<b>50174</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50171</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50175</b>	UInt16	10	0	65535	-	Average Const	
<b>7017</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8017</b>	String	Dig. Input 1	0	160	Predefined Number	SMS Text	
<b>50270</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Digital Input 2</b>
<b>50273</b>	UInt8	0	0	0	-	Low Level	
<b>50272</b>	UInt8	0	0	1	-	High Level	
<b>50274</b>	UInt16	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50271</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50275</b>	UInt16	1	0	65535	-	Average Const	
<b>7116</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8116</b>	String	Dig. Input 2	0	160	Predefined Number	SMS Text	

<b>50280</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Digital Input 3</b>
<b>50283</b>	UInt8	0	0	0	-	Low Level	
<b>50282</b>	UInt8	0	0	1	-	High Level	
<b>50284</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50281</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50285</b>	UInt16	1	0	65535	-	Average Const	
<b>7117</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8117</b>	String	Dig. Input 3	0	160	Predefined Number	SMS Text	
<b>50710</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Digital Input 4</b>
<b>50713</b>	UInt8	0	0	0	-	Low Level	
<b>50712</b>	UInt8	0	0	1	-	High Level	
<b>50714</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50711</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50715</b>	UInt16	1	0	65535	-	Average Const	
<b>7249</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8249</b>	String	Dig. Input 4	0	160	Predefined Number	SMS Text	
<b>50190</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Digital Output 1</b>
<b>50193</b>	UInt8	0	0	0	-	Low Level	
<b>50192</b>	UInt8	0	0	1	-	High Level	
<b>50194</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50191</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50195</b>	UInt16	10	0	65535	-	Average Const	
<b>7019</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8019</b>	String	Dig. Output 1	0	160	Predefined Number	SMS Text	



<b>50300</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Digital Output 2</b>
<b>50303</b>	UInt8	0	0	0	-	Low Level	
<b>50302</b>	UInt8	0	0	1	-	High Level	
<b>50304</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50301</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50305</b>	UInt16	10	0	65535	-	Average Const	
<b>7019</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8019</b>	String	Dig. Output 2	0	160	Predefined Number	SMS Text	
<b>52180</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>DOUT 1 Overcurrent</b>
<b>52183</b>	UInt8	0	0	0	-	Low Level	
<b>52182</b>	UInt8	0	0	1	-	High Level	
<b>5</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>52184</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>52185</b>	UInt16	1	0	65535	-	Average Const	
<b>7421</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8421</b>	String	DOUT 1 Overcurrent	0	160	Predefined Number	SMS Text	
<b>52190</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>DOUT 2 Overcurrent</b>
<b>52193</b>	UInt8	0	0	0	-	Low Level	
<b>52192</b>	UInt8	0	0	1	-	High Level	
<b>5</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>52194</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>52191</b>	UInt16	1	0	65535	-	Average Const	
<b>7422</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8422</b>	String	DOUT 2 Overcurrent	0	160	Predefined Number	SMS Text	

<b>50180</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Analog Input 1</b>
<b>50183</b>	UInt8	0	0	30000	mV	Low Level	
<b>50182</b>	UInt8	0	0	30000	mV	High Level	
<b>50184</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50181</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50185</b>	UInt16	10	0	65535	-	Average Const	
<b>7018</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8018</b>	String	Analog Input 1	0	160	Predefined Number	SMS Text	
<b>50290</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Analog Input 2</b>
<b>50293</b>	UInt8	0	0	30000	mV	Low Level	
<b>50292</b>	UInt8	0	0	30000	mV	High Level	
<b>50294</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50291</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50295</b>	UInt16	10	0	65535	-	Average Const	
<b>7118</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8118</b>	String	Analog Input 2	0	160	Predefined Number	SMS Text	
<b>52160</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Extended Analog Input 1</b>
<b>52163</b>	UInt8	0	0	0	-	Low Level	
<b>52162</b>	UInt8	0	0	1	-	High Level	
<b>52164</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>52161</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>52165</b>	UInt16	1	0	65535	-	Average Const	
<b>7419</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8419</b>	String	Analog Input 1	0	160	Predefined Number	SMS Text	

52170	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Extended Analog Input 2</b>
52173	UInt8	0	0	0	-	Low Level	
52172	UInt8	0	0	1	-	High Level	
52174	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
52171	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
52175	UInt16	10	0	65535	-	Average Const	
7420	UInt8	0	0	10	Predefined Number	Send SMS To	
8420	String	Analog Input 2	0	160	Predefined Number	SMS Text	
51050	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Instant Movement</b>
51053	UInt8	0	0	0	-	Low Level	
51052	UInt8	0	0	1	-	High Level	
51054	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
51051	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
51055	UInt16	10	0	65535	-	Average Const	
7286	UInt8	0	0	10	Predefined Number	Send SMS To	
8286	String	Instant Movement	0	160	Predefined Number	SMS Text	
50220	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Axis X</b>
50223	UInt8	0	-8000	8000	mG	Low Level	
50222	UInt8	0	0	8000	mG	High Level	
50224	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50221	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50225	UInt16	1	0	65535	-	Average Const	
7022	UInt8	0	0	10	Predefined Number	Send SMS To	
8022	String	Axis X	0	160	Predefined Number	SMS Text	

<b>50230</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Axis Y</b>
<b>50233</b>	UInt8	0	-8000	8000	mG	Low Level	
<b>50232</b>	UInt8	0	0	8000	mG	High Level	
<b>50234</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50231</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50235</b>	UInt16	1	0	65535	-	Average Const	
<b>7023</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8023</b>	String	Axis Y	0	160	Predefined Number	SMS Text	
<b>50240</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Axis Z</b>
<b>50243</b>	UInt8	0	-8000	8000	mG	Low Level	
<b>50242</b>	UInt8	0	0	8000	mG	High Level	
<b>50244</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50241</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50245</b>	UInt16	1	0	65535	-	Average Const	
<b>7024</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8024</b>	String	Axis Z	0	160	Predefined Number	SMS Text	
<b>50250</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>ICCID</b>
<b>50254</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50251</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7069</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8069</b>	String	ICCID Value	0	160	Predefined Number	SMS Text	

<b>50310</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature 1</b>
<b>50313</b>	UInt8	0	0	3000	°C	Low Level	
<b>50312</b>	UInt8	0	0	3000	°C	High Level	
<b>50314</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50311</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50315</b>	UInt16	10	0	65535	-	Average Const	
<b>7120</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8120</b>	String	Dallas Temp. 1	0	160	Predefined Number	SMS Text	
<b>50320</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature 2</b>
<b>50323</b>	UInt8	0	0	3000	°C	Low Level	
<b>50322</b>	UInt8	0	0	3000	°C	High Level	
<b>50324</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50321</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50325</b>	UInt16	10	0	65535	-	Average Const	
<b>7121</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8121</b>	String	Dallas Temp. 2	0	160	Predefined Number	SMS Text	
<b>50330</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature 3</b>
<b>50333</b>	UInt8	0	0	3000	°C	Low Level	
<b>50332</b>	UInt8	0	0	3000	°C	High Level	
<b>50334</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50331</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50335</b>	UInt16	10	0	65535	-	Average Const	
<b>7122</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8122</b>	String	Dallas Temp. 3	0	160	Predefined Number	SMS Text	

<b>50340</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature 4</b>
<b>50343</b>	UInt8	0	0	3000	°C	Low Level	
<b>50342</b>	UInt8	0	0	3000	°C	High Level	
<b>50344</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50341</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50345</b>	UInt16	10	0	65535	-	Average Const	
<b>7123</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8123</b>	String	Dallas Temp. 4	0	160	Predefined Number	SMS Text	
<b>50350</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature ID 1</b>
<b>50353</b>	UInt8	0	0	999999999	-	Low Level	
<b>50352</b>	UInt8	0	0	999999999	-	High Level	
<b>50354</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50351</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50355</b>	UInt16	10	0	65535	-	Average Const	
<b>7124</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8124</b>	String	Dallas Temp. ID 1	0	160	Predefined Number	SMS Text	
<b>50360</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature ID 2</b>
<b>50363</b>	UInt8	0	0	999999999	-	Low Level	
<b>50362</b>	UInt8	0	0	999999999	-	High Level	
<b>50364</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50361</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50365</b>	UInt16	10	0	65535	-	Average Const	
<b>7125</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8125</b>	String	Dallas Temp. ID 2	0	160	Predefined Number	SMS Text	

<b>50370</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature ID 3</b>
<b>50373</b>	UInt8	0	0	999999999	-	Low Level	
<b>50372</b>	UInt8	0	0	999999999	-	High Level	
<b>50374</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50371</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50375</b>	UInt16	10	0	65535	-	Average Const	
<b>7126</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8126</b>	String	Dallas Temp. ID 3	0	160	Predefined Number	SMS Text	
<b>50380</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Dallas Temperature ID 4</b>
<b>50383</b>	UInt8	0	0	999999999	-	Low Level	
<b>50382</b>	UInt8	0	0	999999999	-	High Level	
<b>50384</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50381</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50385</b>	UInt16	10	0	65535	-	Average Const	
<b>7127</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8127</b>	String	Dallas Temp. ID 4	0	160	Predefined Number	SMS Text	
<b>50390</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>iButton</b>
<b>50393</b>	UInt8	0	0	999999999	-	Low Level	
<b>50392</b>	UInt8	0	0	999999999	-	High Level	
<b>50394</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50391</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50395</b>	UInt16	10	0	65535	-	Average Const	
<b>7128</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8128</b>	String	iButton	0	160	Predefined Number	SMS Text	

50510	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Eco Score</b>
50513	UInt8	0	0	999999999	-	Low Level	
50512	UInt8	0	0	999999999	-	High Level	
50514	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50511	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7220	UInt8	0	0	10	Predefined Number	Send SMS To	
8220	String	EcoScore	0	160	Predefined Number	SMS Text	
51190	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 1 Custom 1</b>
51193	UInt8	0	0	2147483647	-	Low Level	
51192	UInt8	0	0	2147483647	-	High Level	
51194	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
51195	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7322	UInt8	0	0	10	Predefined Number	Send SMS To	
8322	String	BLE 1 Custom 1	0	160	Predefined Number	SMS Text	
52480	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 1 Custom 2</b>
52483	UInt8	0	0	2147483647	-	Low Level	
52482	UInt8	0	0	2147483647	-	High Level	
52484	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52481	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7323	UInt8	0	0	10	Predefined Number	Send SMS To	
8323	String	BLE 1 Custom 2	0	160	Predefined Number	SMS Text	
52520	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 1 Custom 3</b>
52523	UInt8	0	0	2147483647	-	Low Level	
52522	UInt8	0	0	2147483647	-	High Level	
52524	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52521	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7324	UInt8	0	0	10	Predefined Number	Send SMS To	
8324	String	BLE 1 Custom 3	0	160	Predefined Number	SMS Text	



52560	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 1 Custom 4</b>
52563	UInt8	0	0	2147483647	-	Low Level	
52562	UInt8	0	0	2147483647	-	High Level	
52564	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52561	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7325	UInt8	0	0	10	Predefined Number	Send SMS To	
8325	String	BLE 1 Custom 4	0	160	Predefined Number	SMS Text	
52600	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 1 Custom 5</b>
52603	UInt8	0	0	2147483647	-	Low Level	
52602	UInt8	0	0	2147483647	-	High Level	
52604	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52601	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7463	UInt8	0	0	10	Predefined Number	Send SMS To	
8463	String	BLE 1 Custom 5	0	160	Predefined Number	SMS Text	
51200	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 2 Custom 1</b>
51203	UInt8	0	0	2147483647	-	Low Level	
51202	UInt8	0	0	2147483647	-	High Level	
51204	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
51201	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7451	UInt8	0	0	10	Predefined Number	Send SMS To	
8451	String	BLE 2 Custom 1	0	160	Predefined Number	SMS Text	
52490	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 2 Custom 2</b>
52493	UInt8	0	0	2147483647	-	Low Level	
52492	UInt8	0	0	2147483647	-	High Level	
52494	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52491	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7452	UInt8	0	0	10	Predefined Number	Send SMS To	
8452	String	BLE 2 Custom 2	0	160	Predefined Number	SMS Text	

52530	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 2 Custom 3</b>
52533	UInt8	0	0	2147483647	-	Low Level	
52532	UInt8	0	0	2147483647	-	High Level	
52534	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52531	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7453	UInt8	0	0	10	Predefined Number	Send SMS To	
8453	String	BLE 2 Custom 3	0	160	Predefined Number	SMS Text	
52570	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 2 Custom 4</b>
52573	UInt8	0	0	2147483647	-	Low Level	
52572	UInt8	0	0	2147483647	-	High Level	
52574	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52571	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7454	UInt8	0	0	10	Predefined Number	Send SMS To	
8454	String	BLE 2 Custom 4	0	160	Predefined Number	SMS Text	
52610	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 2 Custom 5</b>
52613	UInt8	0	0	2147483647	-	Low Level	
52612	UInt8	0	0	2147483647	-	High Level	
52614	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52611	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7464	UInt8	0	0	10	Predefined Number	Send SMS To	
8464	String	BLE 2 Custom 5	0	160	Predefined Number	SMS Text	
51210	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 3 Custom 1</b>
51213	UInt8	0	0	2147483647	-	Low Level	
51212	UInt8	0	0	2147483647	-	High Level	
51214	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
51211	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7455	UInt8	0	0	10	Predefined Number	Send SMS To	
8455	String	BLE 3 Custom 1	0	160	Predefined Number	SMS Text	

52500	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 3 Custom 2</b>
52503	UInt8	0	0	2147483647	-	Low Level	
52502	UInt8	0	0	2147483647	-	High Level	
52504	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52501	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7456	UInt8	0	0	10	Predefined Number	Send SMS To	
8456	String	BLE 3 Custom 2	0	160	Predefined Number	SMS Text	
52540	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 3 Custom 3</b>
52543	UInt8	0	0	2147483647	-	Low Level	
52542	UInt8	0	0	2147483647	-	High Level	
52544	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52541	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7457	UInt8	0	0	10	Predefined Number	Send SMS To	
8457	String	BLE 3 Custom 3	0	160	Predefined Number	SMS Text	
52580	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 3 Custom 4</b>
52583	UInt8	0	0	2147483647	-	Low Level	
52582	UInt8	0	0	2147483647	-	High Level	
52584	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
52581	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7458	UInt8	0	0	10	Predefined Number	Send SMS To	
8458	String	BLE 3 Custom 4	0	160	Predefined Number	SMS Text	
52620	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 3 Custom 5</b>
52623	UInt8	0	0	2147483647	-	Low Level	
52622	UInt8	0	0	2147483647	-	High Level	
52624	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52621	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7465	UInt8	0	0	10	Predefined Number	Send SMS To	
8465	String	BLE 3 Custom 5	0	160	Predefined Number	SMS Text	

51220	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 4 Custom 1</b>
51223	UInt8	0	0	2147483647	-	Low Level	
51222	UInt8	0	0	2147483647	-	High Level	
51224	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
51221	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7459	UInt8	0	0	10	Predefined Number	Send SMS To	
8459	String	BLE 4 Custom 1	0	160	Predefined Number	SMS Text	
52510	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 4 Custom 2</b>
52513	UInt8	0	0	2147483647	-	Low Level	
52512	UInt8	0	0	2147483647	-	High Level	
52514	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
52511	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7460	UInt8	0	0	10	Predefined Number	Send SMS To	
8460	String	BLE 4 Custom 2	0	160	Predefined Number	SMS Text	
52550	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 4 Custom 3</b>
52553	UInt8	0	0	2147483647	-	Low Level	
52552	UInt8	0	0	2147483647	-	High Level	
52554	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
52551	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7461	UInt8	0	0	10	Predefined Number	Send SMS To	
8461	String	BLE 4 Custom 3	0	160	Predefined Number	SMS Text	
52590	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 4 Custom 4</b>
52593	UInt8	0	0	2147483647	-	Low Level	
52592	UInt8	0	0	2147483647	-	High Level	
52594	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
52591	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7462	UInt8	0	0	10	Predefined Number	Send SMS To	

<b>8462</b>	String	BLE 4 Custom 4	0	160	Predefined Number	SMS Text	
<b>52630</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE 4 Custom 5</b>
<b>52633</b>	UInt8	0	0	2147483647	-	Low Level	
<b>52632</b>	UInt8	0	0	2147483647	-	High Level	
<b>52634</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>52621</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7466</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8466</b>	String	BLE 4 Custom 5	0	160	Predefined Number	SMS Text	
<b>50530</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Temp #1</b>
<b>50533</b>	UInt8	0	-400	0	°C	Low Level	
<b>50532</b>	UInt8	0	-400	1250	°C	High Level	
<b>50534</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50531</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7223</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8223</b>	String	BLE Temp #1	0	160	Predefined Number	SMS Text	
<b>50540</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Temp #2</b>
<b>50543</b>	UInt8	0	-400	0	°C	Low Level	
<b>50542</b>	UInt8	0	-400	1250	°C	High Level	
<b>50544</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50541</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7224</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8224</b>	String	BLE Temp #2	0	160	Predefined Number	SMS Text	

50550	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Temp #3</b>
50553	UInt8	0	-400	0	°C	Low Level	
50552	UInt8	0	-400	1250	°C	High Level	
50554	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50551	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7225	UInt8	0	0	10	Predefined Number	Send SMS To	
8225	String	BLE Temp #3	0	160	Predefined Number	SMS Text	
50560	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Temp #4</b>
50563	UInt8	0	-400	0	°C	Low Level	
50562	UInt8	0	-400	1250	°C	High Level	
50564	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50561	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7226	UInt8	0	0	10	Predefined Number	Send SMS To	
8226	String	BLE Temp #4	0	160	Predefined Number	SMS Text	
50570	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Battery #1</b>
50573	UInt8	0	0	100	%	Low Level	
50572	UInt8	0	0	100	%	High Level	
50574	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
50571	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7227	UInt8	0	0	10	Predefined Number	Send SMS To	
8227	String	BLE Battery #1	0	160	Predefined Number	SMS Text	

<b>50580</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Battery #2</b>
<b>50583</b>	UInt8	0	0	100	%	Low Level	
<b>50582</b>	UInt8	0	0	100	%	High Level	
<b>50584</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50581</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7228</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8228</b>	String	BLE Battery #2	0	160	Predefined Number	SMS Text	
<b>50590</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Battery #3</b>
<b>50593</b>	UInt8	0	0	100	%	Low Level	
<b>50592</b>	UInt8	0	0	100	%	High Level	
<b>50594</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50591</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7229</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8229</b>	String	BLE Battery #3	0	160	Predefined Number	SMS Text	
<b>50600</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Battery #4</b>
<b>50603</b>	UInt8	0	0	100	%	Low Level	
<b>50602</b>	UInt8	0	0	100	%	High Level	
<b>50604</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50601</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7230</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8230</b>	String	BLE Battery #4	0	160	Predefined Number	SMS Text	

<b>50610</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Humidity #1</b>
<b>50613</b>	UInt8	0	0	1000	%RH	Low Level	
<b>50612</b>	UInt8	0	0	1000	%RH	High Level	
<b>50614</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50611</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7231</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8231</b>	String	BLE Humidity #1	0	160	Predefined Number	SMS Text	
<b>50620</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Humidity #2</b>
<b>50623</b>	UInt8	0	0	1000	%RH	Low Level	
<b>50622</b>	UInt8	0	0	1000	%RH	High Level	
<b>50624</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50621</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7232</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8232</b>	String	BLE Humidity #2	0	160	Predefined Number	SMS Text	
<b>50630</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Humidity #3</b>
<b>50633</b>	UInt8	0	0	1000	%RH	Low Level	
<b>50632</b>	UInt8	0	0	1000	%RH	High Level	
<b>50634</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50631</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7233</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8233</b>	String	BLE Humidity #3	0	160	Predefined Number	SMS Text	



<b>50640</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Humidity #4</b>
<b>50643</b>	UInt8	0	0	1000	%RH	Low Level	
<b>50642</b>	UInt8	0	0	1000	%RH	High Level	
<b>50644</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50641</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7234</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8234</b>	String	BLE Humidity #4	0	160	Predefined Number	SMS Text	
<b>50720</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BT Status</b>
<b>50723</b>	UInt8	0	0	4	-	Low Level	
<b>50722</b>	UInt8	0	0	4	-	High Level	
<b>50724</b>	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
<b>50721</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7250</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8250</b>	String	BT Status	0	160	Predefined Number	SMS Text	
<b>52660</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Lock Discovered</b>
<b>52663</b>	UInt8	0	0	0	-	Low Level	
<b>52662</b>	UInt8	0	0	1	-	High Level	
<b>52664</b>	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
<b>52661</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7469</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8469</b>	String	BLE lock Discovered	0	160	Predefined Number	SMS Text	

50700	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Charger Connected</b>
50703	UInt8	0	0	0	-	Low Level	
50702	UInt8	0	0	1	-	High Level	
50704	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
50701	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7244	UInt8	0	0	10	Predefined Number	Send SMS To	
8244	String	Charger Connected	0	160	Predefined Number	SMS Text	
51730	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Coordinates ISO6709</b>
51734	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
51731	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7376	UInt8	0	0	10	Predefined Number	Send SMS To	
8376	String	ISO6709 Coordinates	0	160	Predefined Number	SMS Text	
51770	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Extended External Voltage</b>
51773	UInt8	0	0	200000	mV	Low Level	
51772	UInt8	0	0	200000	mV	High Level	
51774	UInt8	0	0	1	0 - No 1 - Yes	Event Only	
2 - Crash							
51771	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7380	UInt8	0	0	10	Predefined Number	Send SMS To	
8380	String	Extended External Voltage	0	160	Predefined Number	SMS Text	
52640	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Lock Status</b>
52643	UInt8	0	0	0	-	Low Level	
52642	UInt8	0	0	1	-	High Level	
52644	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
52641	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7467	UInt8	0	0	10	Predefined Number	Send SMS To	
8467	String	BLE lock status	0	160	Predefined Number	SMS Text	

<b>52650</b>	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>BLE Lock Battery</b>
<b>52653</b>	UInt8	0	0	100	%	Low Level	
<b>52652</b>	UInt8	0	0	100	%	High Level	
<b>52654</b>	UInt8	1	0	1	0 - No 1 - Yes	Event Only	
<b>52651</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>7468</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8468</b>	String	BLE lock Battery	0	160	Predefined Number	SMS Text	