

# Template:SAS device Parameter list - SMS/Call Settings

□

## Contents

- [1 SMS/Call settings](#)
  - [1.1 SMS Data Sending](#)
  - [1.2 SMS Commands](#)
  - [1.3 Incoming Call Settings](#)
  - [1.4 Hands Free Call Settings](#)
  - [1.5 Outgoing Call Settings](#)
  - [1.6 Call Duration Limits](#)
  - [1.7 Audio control](#)
  - [1.8 Authorized Numbers](#)
  - [1.9 GSM Predefined Numbers](#)

## SMS/Call settings

### SMS Data Sending

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
3000	Uint8	0	0	1	0 - Disable 1 - Enable	Allow SMS data sending
3001	Char	""	0	16	String	Data Send Number

### SMS Commands

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
3003	Char	""	0	5	String	Login
3004	Char	""	0	5	String	Password
3006	Uint16	UTC+00:00	UTC-12:00	UTC+13:00	Time zone	SMS event Time Zone

### Incoming Call Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		

3005	Uint8	0	0	8	0 - Do nothing 1 - Hangup 2 - Report position 3 - Auto answer 4 - Man-Down 5 - Info SMS 6 - Power Off 7 - Send GPRS Data 8 - Auto Geofencing Off	Incoming call action
------	-------	---	---	---	--	----------------------

## Hands Free Call Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
3008	Uint8	""	0	10	Predefined number	GSM Number

## Outgoing Call Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
3020	Uint8	0	0	1	0 - Disable 1 - Enable	Out going Call in Loudspeaker
3021	Uint8	0	0	1	0 - Normal 1 - Loudspeaker 2 - Silent	Alarm Call Tone Sound

## Call Duration Limits

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
3031	Uint8	0	0	3600	Seconds	Keyboard "Call" Action Duration
3030	Uint8	0	0	3600	Seconds	Other Calls Duration

## Audio control

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
13050	Uint8	40	0	100	%	Indication Volume
13051	Uint8	40	0	100	%	Normal Speaker Volume
13052	Uint8	80	0	100	%	Loud Speaker Volume

## Authorized Numbers

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
4000-4199	Char	""	0	16	String	Authorized number

## GSM Predefined Numbers

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
6000-6009	Char	""	0	16	String	Predefined number