

Test parameters

□

Contents

- [1 System Parameter List](#)
 - [1.1 System Settings](#)
 - [1.2 Static Navigation Settings](#)

System Parameter List

System Settings

Parameter ID	Property Name	Value range		Values	Description
		Min	Max		
138	Movement Source	1	15	1 - Ignition 2 - Accelerometer 4 - GNSS 8 - CAN Speed	The selection of movement detection source/sources, which determines how the device will switch between "On stop" and "Moving" working modes in "Data Acquisition" settings. Multiple sources can be enabled by adding appropriate values. Example: Ignition (1) + Accelerometer (2) = 3.
133	Speed Source	0	1	0 - GNSS 1 - OBD/CAN	Parameter, which determines which speed source to use

Static Navigation Settings

Parameter ID	Property Name	Value range		Values	Description
		Min	Max		
106	Static Navigation	0	1	0 - Disable 1 - Enable	Static Navigation is a filter, which filters out location jumps when the vehicle is stationary
112	Static Navigation Source	0	3	0 - Movement Source 2 - Ignition Source 3 - Movement and Ignition Source	Static navigation exit (movement) detection source