

# DSM Firmware and Drivers update

[Main Page](#) > [Video Solutions](#) > [DSM](#) > **DSM Firmware and Drivers update**



## Contents

- [1 Computer Driver update](#)
  - [1.1 Updating the DSM drivers](#)
    - [1.1.1 For Windows XP, 7, 8, 8.1](#)
    - [1.1.2 For Windows 10](#)
- [2 DSM firmware update](#)

## Computer Driver update

Updating the DSM camera drivers is crucial to ensuring the optimal compatibility between the DSM and the operating system, that way the DSM will be correctly recognized.

### Updating the DSM drivers

To start on the drivers update procedure, please download the latest drivers MDSM-22 from the following page: [Drivers](#)

#### For Windows XP, 7, 8, 8.1

After downloading the archive unzip it. To install, please right-click the installation file and click "Run as administrator"

#### For Windows 10

After downloading the archive unzip it.

- Open the device manager. Device manager can be opened by typing "Device Manager" into the taskbar's search box, or by pressing Windows+R buttons and typing "**deevmgmt.msc**"
- Select a **USB serial Port (COM x)** under **Ports (COM & LPT)**.



- Right-click the correct COM port and select "Properties".
- In the newly popped-up window, Go to the "Driver" tab, and click "Update Driver"



- Select "Browse my computer for driver software" and the "Browse For Folder" window will pop up.



- Choose "rndisdriver". The path should be where the unzipped archive is.



- Press "Next" on the page below. Now the "USB Ethernet/RNDIS gadget" should be visible.

## DSM firmware update

Updating the firmware of DSM is a crucial step in ensuring its optimal performance, security, and reliability. Firmware updates not only introduce new features and enhancements but also resolve known issues. To update the FW of DSM, please follow this guide.

\*Connect the DSM camera to the PC via a Micro USB cable with 5 pins.

- Power on the DSM. After powering it on the repeated beep sound will indicate, that the camera is correctly connected to the computer.
- The activation webpage can be accessed via <http://20.0.0.1:18087/>. (Google Chrome is recommended)
- If You see the page below, please select the language You want to use and sign in using the following credentials:
  - ID: admin
  - Password:1234



- If it is Your first connection and boot of the DSM, please skip the calibration steps, as the calibration should be done from the FMx64 device.
- To update the FW, from the many select "Firmware update", after uploading the file. After the FW update, the DSM will automatically reboot.

