


# FM6300 External Devices

[Main Page](#) > [EOL Products](#) > [FM6300](#) > [FM6300 Configuration](#) > **FM6300 External Devices**

External Devices do not depend on selected profile; they are common for all profiles. To configure these parameters choose the TAB named "External Devices" and make all necessary changes.

 Parameter Name	Parameter description
<b>FMS/Tachograph Settings</b>	<b>Are used to configure CAN line and Tachograph setting such as Enable/Disable, baudrate, operation mode, tachograph ignition source, tachograph type.</b>
<b>Tacho Web</b>	<b>User can enable Web DDD synchronization functionality; enter tacho web server domain and port. User can enable Web DDD synchronization functionality; enter tacho web server domain and port.</b>
<b>Tacho Web start delay</b>	<b>When ignition is on Tacho web starts after this delay.</b>
<b>Analog Input Settings</b>	<b>User can change the range of analog inputs. There are two possible changes: 10 V (0-10 V) and 30 V (0-30 V).</b>
<b>COM1 and COM2 Settings</b>	<b>Configures COM1 and COM2 ports. User can configure baudrate, working mode, enable/disable timestamp and change CMD ID(used to identify from which COM port data came)</b>
<b>COM start/end byte</b>	<b>COM1 and COM2 start and end byte are filter for TCP Binary link mode.</b>
<b>RS485 Settings(COM1)</b>	<b>Configures RS485 settings such as activation of RS485 protocol, baudrate and working mode.</b>
<b>LLS Sensor Settings</b>	<b>Allows user to set LLS sensors addresses in preferred order</b>