

# FM6300 SMS Security

[Main Page](#) > [EOL Products](#) > [FM6300](#) > [FM6300 Configuration](#) > **FM6300 SMS Security**

Essential fields in 'SMS Security' part are 'SMS Login' and 'SMS Password'. This login and password is used with every SMS sent to FM6300. If login and password are not set, every SMS sent to FM6300 device has to include two spaces before command (<space><space><command>).

Command structure: <login><space><password><space><command>. Examples:

- 1.SMS login and password are set - "asd 123 getgps"
- 2.SMS login and password are not set - " getgps"

