

FM6300 System info

[Main Page](#) > [EOL Products](#) > [FM6300](#) > [FM6300 Configuration](#) > **FM6300 System info**

System settings have 5 configurable parameters:

- Sleep mode - where user can turn GPS sleep/deep sleep on or off;
- Sleep timeout - timer which starts after every sleep condition is met and will end up with device going to sleep mode;
- Ignition Source sets ignition triggered functionalities to be triggered by:
 - Power Voltage (if voltage is between High Voltage Level and Low Voltage Level the ignition is considered to be turned on);
 - Digital Input 1;
 - Digital Input 2;
 - Digital Input 3;
 - Digital Input 4;
 - Movement (if accelerometer/movement sensor detects movement then ignition is on, if movement stops - ignition is off).

