

# FM6320 GPRS

'GPRS' defines main parameters for FM6320: destination servers Domain (can be entered either IP or domain name) and port. Also both TCP and UDP protocols are supported. Server Response Time defines the time how long device will wait for response from server before device denies the connection between FMB630 and server. Server 2 is used as duplicated server (not back up server). Some operators use specific authentication for GPRS session - CHAP or PAP. If any of these is used, APN should be entered as 'chap:<APN>' or 'pap:<APN>'. I.e. if operator is using APN 'internet' with CHAP authentication, it should be entered as 'chap:internet'. Information about APN and authentication type should be provided by your GSM operator.

<b>System</b>	GPRS data sending Settings	
<b>GSM</b>	Server #1 Settings	
> GPRS	GPRS Context Activation: Enable	Domain: <input type="text"/>
> GPRS Limits	Protocol: TCP	Target Server Port: 0
> SMS Security	Server #2 Settings	
> SMS Data	GPRS Context Activation: Disable	Domain: <input type="text"/>
> SMS Events Numbers	Protocol: TCP	Target Server Port: 0
> SMS Events	Server Response Timeout: 30 sec	
> Operator list		
<b>Features</b>		
<b>CAN</b>		