

# FM6 getstatus

Example:

```
"Data Link: 1(33) GPRS: 1(1) Phone: 0 SIM: 0 OP: 21407 Signal: 2 NewSMS: 0 Roaming: 1 SMSFull: 0 LAC: 3005 Cell ID: 4852 Network Type: 1 SIM2"
```

Response details	Description
	Indicate module connection to server at the moment:
	x1 - (1 - Data link Open; 0 - Data link Closed) h1/h2 - Last two reasons for closing data link.
	Common reasons:
Data Link: x1(h1h2)	1 ModemOff 2 Closed by device from TCP task (i.e. no more records and data link timo has expired) 3 closed by device from UDP task 4 GsmDetach 5 Server closed link 6 Restart 7 Cant register to OP 9 FOTA task
GPRS: X(Y)	X: Indicates if GPRS is available at the moment. Y: Indicates if APN is configured in the device 0 - No, 1 - Yes
Phone	Voice Call status: 0 - ready, 1 - unavailable, 2 - unknown, 3 -ringing, 4 - call in progress, 5 - asleep.
SIM	SIM Status: 0 - ready, 1 - PIN, 2 - PUK, 3 - PIN2, 4 - PUK2.
OP	Connected to GSM Operator: numerical ID of operator.
Signal	GSM Signal Quality [0-5].
NewSMS	Indicate if new message received.
Roaming	0 - Home Network, 1 - roaming.
SMSFull	SMS storage is full? 0 - OK, 1 - SMS storage full.
LAC	GSM Tower Location Area Code.
Cell ID	GSM Tower Cell ID Code.
Network Type	Gsm Network 3G = 0, Gsm Network 2G = 1, Gsm Network 4G = 2, Gsm Network CatM1 = 3, Gsm Network CatNB1 = 4.