

FMA getstatus

Example:

"Data Link: 0 GPRS: 1 Phone: 0 SIM: 0 OP: 24602 Signal: 5 NewSMS: 0 Roaming: 0 SMSFull: 0 LAC: 1 Cell ID: 864"

Response details	Description
Data Link	Indicate module connection to server at the moment: 0 - Not connected, 1 - connected.
GPRS	Indicate if GPRS is available at the moment.
Phone	Voice Call status: 0 - ready, 1 - unavailable, 2 - unknown, 3 -ringing, 4 - call in progress, 5 - asleep.
SIM	SIM Status: 0 - ready, 1 - PIN, 2 - PUK, 3 - PIN2, 4 - PUK2.
OP	Connected to GSM Operator: numerical ID of operator.
Signal	GSM Signal Quality [0-5].
NewSMS	Indicate if new message received.
Roaming	0 - Home Network, 1 - roaming.
SMSFull	SMS storage is full? 0 - OK, 1 - SMS storage full.
LAC	GSM Tower Location Area Code.
Cell ID	GSM Tower Cell ID Code.