

# FMA setparam

## setparam # #

Sets new value for parameter. ID consists of 3 or 4 digits. Detailed list of parameters and IDs can be found in chapter number 8 "Parameter List".

**Example:** "setparam 1115 127.0.0.1" will change configured IP address.

## setparam 1271 X/212 X

If X is from 0 to 49, X means index of operator code which has to be configured. Up to 20 operator codes may be configured in 1 SMS. Example: Setparam 1271 16 24602,24603,24605 ,here 16th, 17th and 18th operator codes are set. Note! Other operator codes are left unchanged in the configuration.