


FMB002 Status info

[Main Page](#) > [OBD Trackers](#) > [FMB002](#) > [FMB002 Configuration](#) > **FMB002 Status info**



Contents

- [1 Device Info](#)
- [2 GNSS Info](#)
- [3 GSM Info](#)
- [4 I/O Info](#)
- [5 FMS I/O Info](#)
- [6 Tachograph Data Info](#)
- [7 Maintenance](#)
- [8 OBD Info](#)

Status info enables the user to monitor real time information of FMB002. Following fields are displayed: **Device Info**, **GNSS Info**, **GSM Info**, **I/O Info**, **Maintenance** and etc. User is able to export all of the information to **.HTML** file using  icon which is at the top right corner of the **Device Info** area.



Device Info

- Device Name
- Firmware version
- Last Start Time - last device start time.
- RTC Time - real time clock or current device time.
- Power Voltage (mV)
- Device IMEI
- External Storage (used/total) - Internal Flash memory free space.
- Device Uptime - device uptime from last start time.
- Battery Voltage (mV)
- Internal Battery Status - Charging/Not Charging

GNSS Info

- GNSS status
 - Module status - ON, [GPS Sleep](#), [Deep Sleep](#), [Online Deep Sleep](#), [Ultra Deep Sleep](#) mode.
 - GNSS packets - the amount of GNSS packets device received from startup.
 - Fix Status - Fix/No Fix.
 - Fix Time - the last GNSS fix time.
- Satellites
 - Visible - the amount and type of satellites that are visible.
 - In Use - the amount of satellites used for location positioning.
- Location

- Latitude/Longitude - shows current device coordinates and if you press them opens **Object location** window with map.
- Altitude, Angle
- HDOP, PDOP
- Speed - current device speed.

GSM Info

- GSM status
 - Modem Status
 - SIM State - Ready/Unknown
 - GPRS Status - Activated/Deactivated
 - Actual Operator Code
 - Signal Level
- GPRS traffic
 - Sent Data - the amount of data that has been sent by device.
 - Received Data - the amount of data that has been received by device.
 - Total Traffic - Sent Data + Received Data
- Sockets information:
 - Type - AVL Data Sending
 - Socket - Closed or Server domain and port which is used when sending AVL Data via TCP/UDP.
- Records
 - Sent Records count - how many records were sent to the server since last data reset.
 - Last Record Send - date and time when the last record was sent.
 - Last Server Response Time - date and time when the last server response was.
- SMS Count
 - Received SMS - the amount of SMS messages device has received.
 - Sent SMS - the amount of SMS responses that were sent from the device.
 - SMS Count - Received SMS + Sent SMS

I/O Info

- I/O Data - shows the current values from all configurable I/O elements.

FMS I/O Info

- FMS I/O Data - shows the current values from FMS configurable I/O elements.

Tachograph Data Info

- Tachograph Data - shows the current values from Tachograph Data configurable I/O elements.

Maintenance

- Log/Dump
 - Log - after button is pressed, the device starts log capturing for 10 minutes with configuration download. After this time device .log and configuration .cfg will be in compressed archive.

Archive name: YYYY_MM_DD_HH_MM_SS_FMB002_IMEI_Log.zip

Default directory: C:\Users\<username>\Documents

The screenshot shows the 'Maintenance' tab of a software application. It contains several functional areas:

- Log / Dump:** A section with two buttons, 'Log' and 'Dump', for saving data.
- DOUT:** A section with a label 'DOUT 1' and a button labeled 'OFF'.
- Accelerometer:** A section with a 'Read' button to capture accelerometer data.
- LLS calibration:** A section for sensor calibration. It features a dropdown menu for 'Available sensors' (set to 'Analog Input 1'). Below it is a table with two columns: 'Fuel, L' and 'Value, mV'. The table has four rows, each containing '0'. To the right of the table are four red minus signs. Below the table are buttons for 'Add row', 'Clear rows', 'Calculate', and 'Export'. The 'Calculate' and 'Export' buttons are disabled.

- Dump - after button is pressed, the device starts to download .dmp logs and configuration .cfg from device in compressed archive.

Archive name: YYYY_MM_DD_HH_MM_SS_FMB002_IMEI_Dump.zip

Default directory: C:\Users\<username>\Documents

Dump files can be read only with special software. If needed, provide these files to your Teltonika sales manager or Teltonika Support team.

- Open directory - this button appears near **Log** or **Dump** if one of these functions were used.
- Accelerometer - after button is pressed, the device starts to capture accelerometer values for 1 second.

OBD Info

Shows the main OBD parameters with current values when the device is connected to the vehicle via OBDII socket or using [OBDII Bluetooth Dongle](#).