

# FMB020 Auto Geofence settings

[Main Page](#) > [Fast & Easy Trackers](#) > [FMB020](#) > [FMB020 Configuration](#) > **FMB020 Auto Geofence settings**

**Auto Geofence**

**Scenario Settings**

|               |                |
|---------------|----------------|
| Disable       | Low Priority   |
| High Priority | Panic Priority |

**Eventual Records**

|         |        |
|---------|--------|
| Disable | Enable |
|---------|--------|

**Generate Event**

|         |             |
|---------|-------------|
| On Exit | On Entrance |
| On Both |             |

Activation Timeout (s)

Radius (m)

Send SMS To

SMS Text

*AutoGeofence* is based on the last known position after the movement has stopped. You can be notified using this function if your car is taken away. The shape and size of Geofence zones are set by parameters. It is possible to state whether entering or leaving the geofence triggers an asynchronous message. AutoGeofencing options can be configured by following parameters as depicted in the right hand side figure:

Activation timeout defines the delay between the creation of AutoGeofence within set *Radius* value around vehicle's most recent position and when the ignition is off. Note that AutoGeofencing does not require entering coordinates, instead it requires GPS visibility. Event generation can take place on Geofence **Entrance**, **Exit** or **On Both**. *Eventual Records* is used to enable or disable *Eventual Records* functionality.

Auto Geofence deactivates by default if **Power Voltage** becomes higher than low voltage level (defined in **Ignition settings**).