

[https://wiki.teltonika-gps.com/view/FMB125\\_setdigout](https://wiki.teltonika-gps.com/view/FMB125_setdigout)

# FMB125 setdigout

Sets digital output to ON or OFF state (timeout is valid only when DOUT state is changing from OFF to ON).

Example:

"setdigout 0" will set DOUT1 to low level (for infinite time).

Example:

"setdigout 1 30" will set DOUT1 to high level for 30 seconds.