

# FMB130 SMS/GPRS Commands

[Main Page](#) > [Advanced Trackers](#) > [FMB130](#) > [FMB130 Manual](#) > **FMB130 SMS/GPRS Commands**

## Commands apply for these devices:

[FMB001](#) [FMB010](#) [FMB002](#) [FMB020](#) [FMB003](#) [FMB110](#) [FMB120](#) [FMB122](#) [FMB125](#) [FMB130](#) [FMB202](#) [FMB204](#) [FMB208](#) [FMB900](#) [FMB920](#) [FMB962](#) [FMB964](#) [FM3001](#) [FMT100](#) [FMC001](#) [FMC003](#) [FMC00A](#) [FMM001](#) [FMM003](#) [FMM00A](#) [FMC125](#) [FMC130](#) [FMM125](#) [FMM130](#) [FMU125](#) [FMU126](#) [FMU130](#) [MTB100](#) [FMB140](#)

All commands are case sensitive. When user tries to send SMS/GPRS message to device that operates in Deep Sleep mode, it cannot arrive to it because the GSM/GPRS module is disabled most of the time. Device will receive the SMS message when it exits Deep Sleep mode, but GPRS commands will not be received after exiting Deep Sleep Mode.

If the device is in GPS Sleep or Online Deep Sleep mode, sent SMS/GPRS message will arrive to the device.

SMS command structure:

<SMS login><space><SMS password><space><command><space><value>

SMS command [getinfo](#) example:

- If you have set SMS login and password: login pass getinfo
- If SMS login and password are not set leave two spaces before command:   getinfo

GPRS commands require [Codec 12](#) protocol.

□

## Contents

- [1 Commands apply for these devices:](#)
- [2 Common commands](#)
- [3 Bluetooth Commands](#)
- [4 Commands Related to Features](#)
- [5 OBD Commands](#)
- [6 CAN Adapter Commands](#)

To search for compatible products, [Expand all content](#)

## Common commands

---

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">getinfo</a>	Device runtime system information.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Common commands
<a href="#">getver</a>	Returns code version, device IMEI, modem app version, RTC time, Init time, Uptime and BT MAC address.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Common commands
<a href="#">getstatus</a>	Modem Status information.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Common commands

			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">getgps</a>	Current GPS data, date and time.	Yes	Common commands	
<a href="#">getio</a>	Readout analog input,digital input and output.	Yes	Common commands	
<a href="#">ggps</a>	Returns location information with Google maps link.	Yes	Common commands	

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880
<a href="#">radio</a> #	Returns IO status, # AVL ID.	Yes	Common commands	
<a href="#">cpureset</a>	Resets device	No	Common commands	
<a href="#">fwstats</a>	Get data about FW and restarts	Yes	Common commands	

			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>  <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>  <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">getrecord</a>	SMS command initiates saving and sending of high priority record.	No	Common commands	
<a href="#">getimeiccid #</a>	Response is sent to SMS/GPRS command sender and also to GSM number provided. # - GSM number using international format e.g. 37069012345	Yes	Common commands	
<a href="#">getimsi</a>	Sends the IMSI number of the SIM card inserted as a response to the sender.  If two SIM cards are inserted in the device, the response will be the IMSI number of the currently active SIM card.  <b>Note: This command is supported from 03.10.02 firmware version.</b>	Yes	Common commands	

[getops](#)

Returns list of all currently visible operators.

Yes

Common commands

[allver](#)

Responds with information about hardware and firmware versions and storage space

Yes

Common commands

[getparam](#) #

Returns selected parameter value.  
# - first [ID value](#). # - second [ID value](#). # - third [ID value](#).  
SMS command is limited to 160 characters.

Yes

Common commands

[getparam](#) #;#;...

FMBXXX  
[FMB001](#)  
[FMC001](#)  
[FMB010](#)  
[FMB110](#)  
[FMB120](#)  
[FMB122](#)  
[FMB125](#)  
[FMB130](#)  
[FMB140](#)  
[FMB150](#)  
[FMC150](#)  
[FMM150](#)  
[FMB900](#)  
[FMB920](#)  
[FMB202](#)  
[FMB204](#)  
[FMB206](#)  
[FMT100](#)  
[FMP100](#)  
[FMC001](#)  
[FMC125](#)  
[FMC130](#)  
[FMM001](#)  
[FMM125](#)  
[FMM130](#)  
[FMC800](#)  
[FMM800](#)  
[FMM80A](#)  
[FMC880](#)  
[FMM880](#)  
FMBXXX  
[FMB001](#)  
[FMC001](#)  
[FMB010](#)  
[FMB110](#)  
[FMB120](#)  
[FMB122](#)  
[FMB125](#)  
[FMB130](#)  
[FMB140](#)  
[FMB150](#)  
[FMC150](#)  
[FMM150](#)  
[FMB900](#)  
[FMB920](#)  
[FMB202](#)  
[FMB204](#)  
[FMB206](#)  
[FMT100](#)  
[FMP100](#)  
[FMC001](#)  
[FMC125](#)  
[FMC130](#)  
[FMM001](#)  
[FMM125](#)  
[FMM130](#)  
[FMC800](#)  
[FMM800](#)  
[FMM80A](#)  
[FMC880](#)  
[FMM880](#)  
FMBXXX  
[FMB001](#)  
[FMC001](#)  
[FMB010](#)  
[FMB110](#)  
[FMB120](#)  
[FMB122](#)  
[FMB125](#)  
[FMB130](#)  
[FMB140](#)  
[FMB150](#)  
[FMC150](#)  
[FMM150](#)  
[FMB900](#)  
[FMB920](#)  
[FMB202](#)  
[FMB204](#)  
[FMB206](#)  
[FMT100](#)  
[FMP100](#)  
[FMC001](#)  
[FMC125](#)  
[FMC130](#)  
[FMM001](#)  
[FMM125](#)  
[FMM130](#)  
[FMC800](#)  
[FMM800](#)  
[FMM80A](#)  
[FMC880](#)  
[FMM880](#)

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880		
<a href="#">setparam</a> #:#	Sets selected parameter value			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880		
	[Parameter ID] : [New Parameter Value] ; [Parameter ID] : [New Parameter Value]...	Yes		FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Common commands	
	SMS command is limited to 160 characters.			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880		
<a href="#">setparam</a> #:#;#:#;...				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880		
	Redirects device to other server.			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880		
<a href="#">flush</a> #,#,#,#,#,#,#	1.# - IMEI. 2.# - APN. 3.# - LOGIN. 4.# - PASS. 5.# - IP. 6.# - PORT. 7.# - MODE (0-TCP/1-UDP).	Yes		FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Common commands	
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880		
<a href="#">countrecs</a>	Returns records number.	Yes		FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Common commands	

				<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMBXXX</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB900</a> <a href="#">FMB910</a> <a href="#">FMB920</a> <a href="#">FMB962</a> <a href="#">FMB964</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB209</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMU125</a> <a href="#">FMC130</a> <a href="#">FMM130</a> <a href="#">FMU130</a> <a href="#">FMU126</a> <a href="#">MSP500</a> <a href="#">FMBXXX</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB900</a> <a href="#">FMB910</a> <a href="#">FMB920</a> <a href="#">FMB962</a> <a href="#">FMB964</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB209</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMU125</a> <a href="#">FMC130</a> <a href="#">FMM130</a> <a href="#">FMU130</a> <a href="#">FMU126</a> <a href="#">MSP500</a>
<a href="#">web_connect</a>	Forces device to connect to Fota WEB immediately.	Yes		Common commands
<a href="#">deleterecords</a>	Delete all records from SD card.	Yes		Common commands
<a href="#">setdigout ## Y1 Y2 Z1 Z2</a>	Set digital output. 1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1. 2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2. Y1 - timeout value for DOUT1 if needed (in seconds). Y2 - timeout value for DOUT2 if needed (in seconds). Z1 - maximum speed value for DOUT1 if needed. Z2 - maximum speed value for DOUT2 if needed.	Yes		Common commands
<a href="#">setindigout ### Y1 Y2 Y3</a>	Set digital output when ignition is off. 1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1. 2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2. 3.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT3. Y1 - timeout value for DOUT1 if needed (in seconds). Y2 - timeout value for DOUT2 if needed (in seconds). Y3 - timeout value for DOUT3 if needed (in seconds).	Yes		Common commands



				FMBXXX FMB001 FMC001 FMM001 FMB002 FMB003 FMB010 FMB020 FMB120 FMB122 FMB125 FMB130 FMB140 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB208 FMB209 FMC125 FMM125 FMI125 FMI126 FMC130 FMM130 FMI130 MSP500 FMT100 FMP100 FMC800 FMM800 FMM80A		
<a href="#">battery</a>	Returns battery state info.	Yes		FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Common commands	
<a href="#">wdlog</a>	Returns all information about 'watch dogs'	Yes		FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Common commands	
<a href="#">defaultcfg</a>	Load default configuration.	Yes		FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Common commands	

			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>  <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>  <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">setkey</a> # #	Add new or change current configuration keyword. If device is locked, keyword cannot be changed. 1.# - old keyword (if adding new keyword space). 2.# - new keyword.	Yes	Common commands	
<a href="#">delkey</a> #	Remove existing keyword (If device is locked, keyword cannot be changed). # - old keyword.	Yes	Common commands	
<a href="#">bbread</a> #	Return black box information (HEX value of event ID and HEX value of custom data field (optional)). # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes	Common commands	

			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">bbinfo</a> #	Return same information as bbread command but additional all events timestamp is written in HEX. # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes		Common commands
<a href="#">sdformat</a>	Format SD card.	Yes		Common commands

Bluetooth Commands

Command	Description	Response	HW Support	Parameter Group
			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">btgetlist</a> #	Returns requested Bluetooth list. # - 0,1 or 2 (0 - Discovered, 1 - Paired, 2 - Connected, 3 - Discovered BT4/BLE devices).	Yes		Bluetooth commands

			FMBXXX <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<i>btscan</i>	Starts Bluetooth scan.	Yes	Bluetooth commands	
			FMBXXX <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<i>btvisible #</i>	Sets Bluetooth to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Yes	Bluetooth commands	
			FMBXXX <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<i>btrelease #</i>	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Yes	Bluetooth commands	
			FMBXXX <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	

				FMBXXX <a href="#">FMB001</a>	
				<a href="#">FMC001</a>	
				<a href="#">FMB010</a>	
				<a href="#">FMB110</a>	
				<a href="#">FMB120</a>	
				<a href="#">FMB122</a>	
				<a href="#">FMB125</a>	
				<a href="#">FMB130</a>	
				<a href="#">FMB140</a>	
				<a href="#">FMB150</a>	
				<a href="#">FMC150</a>	
				<a href="#">FMM150</a>	
				<a href="#">FMB900</a>	
				<a href="#">FMB920</a>	
				<a href="#">FMB202</a>	
				<a href="#">FMB204</a>	
				<a href="#">FMB206</a>	
				<a href="#">FMT100</a>	
				<a href="#">FMP100</a>	
				<a href="#">FMC001</a>	
				<a href="#">FMC125</a>	
				<a href="#">FMC130</a>	
				<a href="#">FMM001</a>	
				<a href="#">FMM125</a>	
				<a href="#">FMM130</a>	
				<a href="#">FMC800</a>	
				<a href="#">FMM800</a>	
				<a href="#">FMM80A</a>	
				<a href="#">FMC880</a>	
				<a href="#">FMM880</a>	

btunpair #

Unpair Bluetooth device.

# - all, BT address (all - unpair all devices, BT address - unpair only specified MAC address).

Yes

Bluetooth commands

Commands Related to Features

				FMBXXX <a href="#">FMB001</a>	
				<a href="#">FMC001</a>	
				<a href="#">FMB010</a>	
				<a href="#">FMB110</a>	
				<a href="#">FMB120</a>	
				<a href="#">FMB122</a>	
				<a href="#">FMB125</a>	
				<a href="#">FMB130</a>	
				<a href="#">FMB140</a>	
				<a href="#">FMB150</a>	
				<a href="#">FMC150</a>	
				<a href="#">FMM150</a>	
				<a href="#">FMB900</a>	
				<a href="#">FMB920</a>	
				<a href="#">FMB202</a>	
				<a href="#">FMB204</a>	
				<a href="#">FMB206</a>	
				<a href="#">FMT100</a>	
				<a href="#">FMP100</a>	
				<a href="#">FMC001</a>	
				<a href="#">FMC125</a>	
				<a href="#">FMC130</a>	
				<a href="#">FMM001</a>	
				<a href="#">FMM125</a>	
				<a href="#">FMM130</a>	
				<a href="#">FMC800</a>	
				<a href="#">FMM800</a>	
				<a href="#">FMM80A</a>	
				<a href="#">FMC880</a>	
				<a href="#">FMM880</a>	

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

			<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	
<a href="#">fc_reset</a>	Resets fuel consumption parameters.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Commands related to features
<a href="#">towingreact</a>	Towing reactivation.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Commands related to features
<a href="#">auto_calibrate:get</a>	Returns the state of calibration.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Commands related to features
<a href="#">odoset:#</a>	Set total odometer value. # - new odometer value in km.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a>	Commands related to features

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
<a href="#">odoget</a>	Display current odometer value.	Yes		Commands related to features
<a href="#">go2sleep</a>	Puts device to sleep ignoring going to sleep condition and stays asleep for the set time. <b>Note: This command is supported from 03.27.10.Rev.482 firmware version.</b>	Yes	FMB965 FMB930	Commands related to features
			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
<a href="#">on_demand_trackingX</a>	X=0 - Stops Tracking on Demand functionality. X=1 - Starts Tracking on Demand functionality. X=2 - Generates one high priority record and inititates data sending to server. <b>Note: This command is supported from 03.25.06 firmware version.</b>	Yes		Commands related to features

# OBD Commands

Command	Description	Response	HW Support	Parameter Group
<a href="#">obdinfo</a>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all available information from OBD.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	OBD Commands

<a href="#">faultcodes</a>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all visible fault codes.	Yes	OBD Commands	FMBXXX
				<a href="#">FMB001</a>
				<a href="#">FMC001</a>
				<a href="#">FMB010</a>
				<a href="#">FMB110</a>
				<a href="#">FMB120</a>
				<a href="#">FMB122</a>
				<a href="#">FMB125</a>
				<a href="#">FMB130</a>
				<a href="#">FMB140</a>
				<a href="#">FMB150</a>
				<a href="#">FMC150</a>
				<a href="#">FMM150</a>
				<a href="#">FMB900</a>
				<a href="#">FMB920</a>
				<a href="#">FMB202</a>
				<a href="#">FMB204</a>
				<a href="#">FMB206</a>
				<a href="#">FMT100</a>
				<a href="#">FMP100</a>
				<a href="#">FMC001</a>
				<a href="#">FMC125</a>
				<a href="#">FMC130</a>
				<a href="#">FMM001</a>
				<a href="#">FMM125</a>
				<a href="#">FMM130</a>
				<a href="#">FMC800</a>
				<a href="#">FMM800</a>
				<a href="#">FMM80A</a>
				<a href="#">FMC880</a>
				<a href="#">FMM880</a>
				FMBXXX
				<a href="#">FMB001</a>
				<a href="#">FMC001</a>
				<a href="#">FMB010</a>
				<a href="#">FMB110</a>
				<a href="#">FMB120</a>
				<a href="#">FMB122</a>
				<a href="#">FMB125</a>
				<a href="#">FMB130</a>
				<a href="#">FMB140</a>
				<a href="#">FMB150</a>
				<a href="#">FMC150</a>
				<a href="#">FMM150</a>
				<a href="#">FMB900</a>
				<a href="#">FMB920</a>
				<a href="#">FMB202</a>
				<a href="#">FMB204</a>
				<a href="#">FMB206</a>
				<a href="#">FMT100</a>
				<a href="#">FMP100</a>
				<a href="#">FMC001</a>
				<a href="#">FMC125</a>
				<a href="#">FMC130</a>
				<a href="#">FMM001</a>
				<a href="#">FMM125</a>
				<a href="#">FMM130</a>
				<a href="#">FMC800</a>
				<a href="#">FMM800</a>
				<a href="#">FMM80A</a>
				<a href="#">FMC880</a>
				<a href="#">FMM880</a>
cleardtc	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Command clears all vehicle stored fault codes.	Yes	OBD Commands	FMBXXX
				<a href="#">FMB001</a>
				<a href="#">FMC001</a>
				<a href="#">FMB010</a>
				<a href="#">FMB110</a>
				<a href="#">FMB120</a>
				<a href="#">FMB122</a>
				<a href="#">FMB125</a>
				<a href="#">FMB130</a>
				<a href="#">FMB140</a>
				<a href="#">FMB150</a>
				<a href="#">FMC150</a>
				<a href="#">FMM150</a>
				<a href="#">FMB900</a>
				<a href="#">FMB920</a>
				<a href="#">FMB202</a>
				<a href="#">FMB204</a>
				<a href="#">FMB206</a>
				<a href="#">FMT100</a>
				<a href="#">FMP100</a>
				<a href="#">FMC001</a>
				<a href="#">FMC125</a>
				<a href="#">FMC130</a>
				<a href="#">FMM001</a>
				<a href="#">FMM125</a>
				<a href="#">FMM130</a>
				<a href="#">FMC800</a>
				<a href="#">FMM800</a>
				<a href="#">FMM80A</a>
				<a href="#">FMC880</a>
				<a href="#">FMM880</a>
				FMBXXX
				<a href="#">FMB001</a>
				<a href="#">FMC001</a>
				<a href="#">FMB010</a>
				<a href="#">FMB110</a>
				<a href="#">FMB120</a>
				<a href="#">FMB122</a>
				<a href="#">FMB125</a>
				<a href="#">FMB130</a>
				<a href="#">FMB140</a>
				<a href="#">FMB150</a>
				<a href="#">FMC150</a>
				<a href="#">FMM150</a>
				<a href="#">FMB900</a>
				<a href="#">FMB920</a>
				<a href="#">FMB202</a>
				<a href="#">FMB204</a>
				<a href="#">FMB206</a>
				<a href="#">FMT100</a>
				<a href="#">FMP100</a>
				<a href="#">FMC001</a>
				<a href="#">FMC125</a>
				<a href="#">FMC130</a>
				<a href="#">FMM001</a>
				<a href="#">FMM125</a>
				<a href="#">FMM130</a>
				<a href="#">FMC800</a>
				<a href="#">FMM800</a>
				<a href="#">FMM80A</a>
				<a href="#">FMC880</a>
				<a href="#">FMM880</a>
getvin	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays vehicle VIN code.	Yes	OBD Commands	FMBXXX
				<a href="#">FMB001</a>
				<a href="#">FMC001</a>
				<a href="#">FMB010</a>
				<a href="#">FMB110</a>
				<a href="#">FMB120</a>
				<a href="#">FMB122</a>
				<a href="#">FMB125</a>
				<a href="#">FMB130</a>
				<a href="#">FMB140</a>
				<a href="#">FMB150</a>
				<a href="#">FMC150</a>
				<a href="#">FMM150</a>
				<a href="#">FMB900</a>
				<a href="#">FMB920</a>
				<a href="#">FMB202</a>
				<a href="#">FMB204</a>
				<a href="#">FMB206</a>
				<a href="#">FMT100</a>
				<a href="#">FMP100</a>
				<a href="#">FMC001</a>
				<a href="#">FMC125</a>
				<a href="#">FMC130</a>
				<a href="#">FMM001</a>
				<a href="#">FMM125</a>
				<a href="#">FMM130</a>
				<a href="#">FMC800</a>
				<a href="#">FMM800</a>
				<a href="#">FMM80A</a>
				<a href="#">FMC880</a>
				<a href="#">FMM880</a>
				FMBXXX
				<a href="#">FMB001</a>
				<a href="#">FMC001</a>
				<a href="#">FMB010</a>
				<a href="#">FMB110</a>
				<a href="#">FMB120</a>
				<a href="#">FMB122</a>
				<a href="#">FMB125</a>
				<a href="#">FMB130</a>
				<a href="#">FMB140</a>
				<a href="#">FMB150</a>
				<a href="#">FMC150</a>
				<a href="#">FMM150</a>
				<a href="#">FMB900</a>
				<a href="#">FMB920</a>
				<a href="#">FMB202</a>
				<a href="#">FMB204</a>
				<a href="#">FMB206</a>
				<a href="#">FMT100</a>
				<a href="#">FMP100</a>
				<a href="#">FMC001</a>
				<a href="#">FMC125</a>
				<a href="#">FMC130</a>
				<a href="#">FMM001</a>
				<a href="#">FMM125</a>
				<a href="#">FMM130</a>
				<a href="#">FMC800</a>
				<a href="#">FMM800</a>
				<a href="#">FMM80A</a>
				<a href="#">FMC880</a>
				<a href="#">FMM880</a>

## CAN Adapter Commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------



			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>lvcansetprog #</i>	Set program number to CAN Adapter # - three to five digit vehicle specific number	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>lvcangetprog</i>	Get program number from CAN Adapter	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcangetinfo</a>	Get information about connected CAN adapter	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>lvcansimpletacho #</i>	Add or remove simpletacho start byte. # - 0 or 1 (0 - don't add start byte, 1 - add start byte).	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanclear #</a>	Clear Total Mileage (counted), Engine Work Time (counted), Fuel Consumed (counted) parameters values. # - parameter (0 - Engine work time (counted), 1 - Fuel Consumed (counted), 2 - Vehicle Mileage (counted))..	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>allcanmode</i>	Turn on ALL-CAN300 mode.	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>lvcanmode</i>	Turn on LV-CAN200 mode.	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanfaultcodes</a>	Read DTC fault codes.	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>lvcanopenalldoors</i>	Toggle CAN-CONTROL to open [unlock] all doors	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<i>lvcanclosealldoors</i>	Toggle CAN-CONTROL to close [lock] all doors	Yes		CAN Adapter Commands

			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMB130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanopentru</a>	Toggle CAN-CONTROL to open [unlock] trunk	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMB130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanblockengine</a>	Toggle CAN-CONTROL to block vehicle engine (if command is <b>not</b> supported, please, visit <a href="#">FAQ</a> )	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMB130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanunblockengine</a>	Toggle CAN-CONTROL to unblock vehicle engine (if command is <b>not</b> supported, please, visit <a href="#">FAQ</a> )	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMB130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanturninglights</a>	Toggle CAN-CONTROL to flash lights One flash of all turn lights ordered trough accidental / blinking turn light switch	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMB130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcanhorn</a>	Toggle CAN-CONTROL to activate single horn sound	Yes		CAN Adapter Commands
			FMBXXX <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMB130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	
<a href="#">lvcansetting#,#</a>	This command is used to set specific counters for vehicles. From that moment of setting the value, vehicle will continue to count from the specified value. 1.#: 0 - setting total engine work time (seconds) 1 - setting total mileage of the vehicle (km) 2 - resetting total fuel consumption to 0 is available (liters) 3 - setting total CNG use (kg) 4 - setting electric engine work time (seconds) 5 - setting wheel speed sensor impulses (impulses) 2.# - value(0 to 0xFFFFFFFF or ? (? - is used to get the current setting value)) <b>Note: This command is supported from 03.25.15.Rev.145 firmware version.</b>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands
<a href="#">lvcanrefresh</a>	This command forces FMB1YX connection to FOTA WEB to report current CAN adapter status. <b>Note: This command is supported from 03.25.16.Rev.281 firmware version.</b>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands
<a href="#">lvcanreset</a>	This command forces CAN adapter reset. <b>Note: This command is supported from 03.25.16.Rev.281 firmware version.</b>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands
<a href="#">lvcancheck</a>	This command reports CAN lines connection information. <b>Note: This command is supported from 03.25.16.Rev.281 firmware version.</b>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands