

FMB204 Configuration Examples

- [Status info](#)
- [Security info](#)
- [System settings](#)
- [GPRS settings](#)
- [SMS/Call settings](#)
- [GSM Operators settings](#)
- [Data acquisition settings](#)
- [Features settings](#)
 - [Green Driving](#)
 - [Over Speeding](#)
 - [Jamming](#)
 - [Using authorized numbers to control DOUT via call](#)
 - [Immobilizer](#)
 - [iButton read notification](#)
 - [GPS Fuel Counter](#)
- [Accelerometer Features settings](#)
 - [Excessive Idling](#)
 - [Unplug Detection](#)
 - [Towing Detection](#)
 - [Crash Detection](#)
- [Auto Geofence settings](#)
- [Manual Geofence settings](#)
- [Trip/Odometer settings](#)
 - [Trip Settings](#)
 - [Advanced Trip Settings](#)
 - [Odometer](#)
- [Bluetooth® settings](#)
 - [General functionality](#)
 - [How to connect Bluetooth® Hands Free adapter to FMB device](#)
 - [Logging the FMB204 device using your mobile phone](#)
 - [Device debug over Android smartphone](#)
 - [How to connect OBD II Bluetooth® Dongle to FMB device](#)
- [iButton List settings](#)
- [I/O settings](#)
 - [Operands](#)
 - [Avg Const](#)
 - [OBD II \(Bluetooth®\) and LVCAN I/O elements](#)
- [SMS events](#)