

{{HandsFree_parag|

Hands-Free Call settings

When FMB206 is connected to a hands-free headset, it can call to user defined GSM numbers.



Outgoing Call Trigger parameter determines which event will trigger a call. FMB206 supports eight call trigger settings:

- None selected - disables call trigger functionality.
- **Crash Event** - crash event triggers a call to user selected GSM number.

FMB206 works in synchronized GPS time which is UTC+0, with this option customers can configure the time zone and get SMS messages with the correct time.

	Please do not set <i>Data Send Number</i> to some cell phone number, because it will not understand binary SMS. When sending a binary SMS to a phone number, which is a server phone number, the server can interpret and understand binary code, so the data can be read and you can view it on the server.
	SMS login and password and authorized numbers list are used to protect FMB206 module from unauthorized access. Module accepts messages only from a list of authorized numbers and with proper module login and password. Phone numbers have to be written in international standard using "+" or without using it (in both cases the number will be recognized). If no authorized numbers are entered, module accepts messages from all numbers.