

# FMB206 SMS events

[FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > [FMB206 Configuration](#) > **FMB206 SMS events**

## SMS Events

From firmware version **03.29.00.Rev.00** improvement in configuring SMS events is made. SMS event configuration will be available in a single tab, which would allow more flexible FMB206 configuration, and improved visibility and readability of configured parameters. Additionally, now it is possible to send a SMS notification to multiple phone numbers simultaneously.

The screenshot displays the 'SMS \ Call Settings' tab in the FMB206 configuration software. The interface is divided into several sections:

- SMS Data Sending:** Includes a toggle for 'Allow SMS Data Sending' (currently set to 'Disable') and a 'Data Send Number' field.
- SMS Commands:** Includes fields for 'Login', 'Password', and a dropdown for 'SMS Event Time Zone' (set to 'UTC+00:00').
- Incoming Call Settings:** Includes a dropdown for 'Incoming Call Action' (set to 'Do Nothing') and buttons for 'Report Position' and 'Auto Answer (HF)'. There is also a 'Crash Event' button.
- Hands Free Call Settings:** Includes a dropdown for 'Outgoing Call Trigger' (set to 'DIN 1') and a 'GSM Number' dropdown.
- Authorized Numbers:** A list of 20 numbered rows for entering phone numbers, with 'Import CSV' and 'Export CSV' buttons at the bottom.
- GSM Predefined Numbers:** A list of 10 numbered rows for entering predefined phone numbers, with 'Import CSV' and 'Export CSV' buttons at the bottom.

The left sidebar contains a menu with various configuration categories like Security, System, GPRS, Data Acquisition, and SMS \ Call Settings. The bottom of the interface has social media icons and a gear icon for settings.

Old SMS Events configuration

**Note:** These changes effect SMS events configuration for I/O elements and Manual Geofence only. SMS events configuration logic is not changed for Features and Acc.Features.

SMS events functionality allows FMB206 to send a configured SMS when an event is triggered. This event can be triggered by every I/O element.


When any of the I/O elements are triggered, FMB206 sends a configured SMS message to a defined phone number.



FMB206 is able to send SMS messages to Predefined phone numbers (recipients) if any of the selected events are triggered. Users can send SMS alert messages of selected events to a maximum of 10 predefined phone numbers. AVL ID of the parameter has to be entered in the configuration to receive its SMS event. AVL ID list is defined and available each device wiki page under ["Teltonika Data Sending Parameters ID"](#) tab.

Predefined phone numbers must be entered in the SMS Events Numbers list in the 'SMS \ Call Settings' menu before it will be possible to pair them with AVL ID and SMS event text.

SMS Event Text is used to add additional text to standard SMS event message text.

If FMB206 is in *Deep Sleep* mode and an SMS event occurs with *Low priority* (which does not wake up FMB206), then the device does not send the message. It is saved to device memory until  it wakes up from *Deep Sleep* mode and GSM modem starts working normally. After it wakes up, all the messages that are saved to memory will be sent, but keep in mind that only 10 messages can be saved to memory - all other messages will not be saved, until there is free memory space.

## SMS Events in older versions

SMS events functionality allows FMB206 to send a configured SMS when an event is triggered. This event can be triggered by every I/O element.

When any of the I/O elements is triggered, FMB206 sends a configured SMS message to a defined phone number. If SMS events are activated but there are no numbers defined in *GSM Predefined Numbers* list (similarly as in the picture below), then the device will not send any messages.



The sent SMS messages format is following:

*"Date Time Current Coordinate Event Text"*

For example, if FMB206 is configured to send an SMS, when Ignition reaches high level while configured with *High priority* and event generation is set to both range entrance and exit (as shown in the figure below), then the following SMS is sent:

*"2017/06/13 13:52:18 Lon:25.255537 Lat:54.667193 Ignition 1"*



The SMS Text field can be altered and any text can be entered. Maximum message length is 160 symbols (numbers, letters and symbols in ASCII, except for comma symbol ",").