

FMB209 Security info

[FMB209 Configuration](#) > **FMB209 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot shows the Teltonika FMB209 Security info web interface. The top navigation bar includes the Teltonika logo and several action buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. A SIM card icon and IMEI information (IMEI 869110000000000, FW 03.25.15 Rev: 1.0, Configuration 6.1.17.0) are also visible.

The main content area is divided into several sections:

- Device Info:** Displays device name, last start time (31/12/2003 06:00:18 p. m.), power voltage (17105 mV), external storage (0 / 122 MB), battery voltage (0 mV), firmware version (03.25.15 Rev: 1.0), RTC time (31/12/2003 06:01:05 p. m.), device IMEI (3506030402601000), device uptime (00:00:47), and internal battery status (Not Charging 0%).
- GNSS Info:** Includes tabs for GSM Info, I/O Info, and Maintenance. The GNSS Status section shows module status (ON), GNSS packets (32), and fix status (No fix). The Satellites section is divided into Visible and In Use categories, listing GPS, GLONASS, BeiDou, and Galileo satellites. The Location section displays latitude/longitude (0,0), altitude (0), HDOP (0), speed (0 km/h), angle (0°), and PDOP (0).

The bottom of the interface features a social media bar with icons for Facebook, YouTube, Twitter, LinkedIn, and others, along with a gear icon for settings.

*Please note that This feature will only show up in configurator when device is connected to a computer.