

FMB225 Security info

[FMB225 Configuration](#) > **FMB225 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB225 Security info interface. At the top, there are utility buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. A top right corner shows the IMEI (359633020001000), FW (03.25.15 Rev: 1.0), and Configuration (6.1.17.0).

The main content area is divided into sections:

- Device Info:** A table showing device details.

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	359633020001000	00:00:47	Not Charging 0%
- GNSS Info:** Includes tabs for GSM Info, I/O Info, and Maintenance.
 - GNSS Status:** Module Status (ON), GNSS Packets (32), Fix Status (No fix), Fix Time (00:00:00).
 - Satellites:** Divided into Visible and In Use. Visible includes GPS (4), GLONASS (0), BeiDou (0), and Galileo (0). In Use includes GPS (0), GLONASS (0), BeiDou (0), and Galileo (0). Total In View is 4, and Total In Use is 0.
 - Location:** Latitude/Longitude (0,0), Altitude (0), HDOP (0), Speed (0 km/h), Angle (0°), and PDOP (0).

The bottom of the interface features a sidebar with navigation options (Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, OBD II) and a footer with social media icons and a settings gear.

*Please note that This feature will only show up in configurator when device is connected to a computer.