

FMB640 First start card



Leading LTE/GNSS/BLE Terminal for advanced applications



Contents


- [1 How to insert SIM card and connect the battery](#)
- [2 How to insert microSD card into FMB640](#)

How to insert SIM card and connect the battery


1. **Unscrew** 4 screws counterclockwise that are located on the **bottom** of the device.
2. Remove the **cover**.
3. Insert **SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in [Teltonika Configurator](#). Make sure that SIM card **cut-off corner** is pointing forward to slot. **SIM slot 1** is closer to PCB, **SIM slot 2** is the upper one.
4. Connect **battery** as shown to device.
5. After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **cover** back.
6. **Screw** in all screws. Device is ready to be mounted.



Micro-SIM card insertion/removal must be performed when device is powered off -

-  **external voltage and internal battery disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**

How to insert microSD card into FMB640

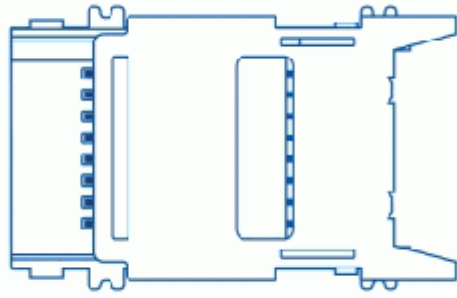

1. Push microSD card lock case.
2. Open microSD card locker.
3. Correctly insert microSD card into slot.
4. Close microSD card locker.
5. Push microSD card lock case to locked position.