

# FMB640 LED status

[Main Page](#) > [EOL Products](#) > [FMB640](#) > [FMB640 Manual](#) > **FMB640 LED status**

This section is an explanation of LED indications on an FMB640 device.

## Navigation LED Indications

| Behaviour                       | Meaning   |
|---------------------------------|---|
| <b>Permanently switched on</b>  | GNSS signal is not received   |
| <b>Blinking every second</b>    | Normal mode, GNSS is working  |
| <b>Off</b>                      | GNSS is turned off because:<br>Device is not working<br>or<br>Device is in sleep mode |
| <b>Blinking fast constantly</b> | Device firmware is being flashed  |

## Status LED Indications

| Behaviour                             | Meaning   |
|---------------------------------------|---|
| <b>Blinking every second</b>          | Normal mode   |
| <b>Blinking every two seconds</b>     | Sleep mode  |
| <b>Blinking fast for a short time</b> | Modem activity  |
| <b>Off</b>                            | Device is not working<br>or<br>Device is in boot mode |