

FMB641 Manual Geofence settings

[Main Page](#) > [EOL Products](#) > [FMB641](#) > [FMB641 Configuration](#) > **FMB641 Manual Geofence settings**

Frame Border Size (meters) setting defines Manual Geofence border size in meters.

Geozones Overspeeding DOUT setting defines DOUT control in **Manual Geofence Zones** overspeeding scenario, which also can be configured in **Manual Geofence Zones** TAB.

DOUT ON Duration (ms) defines value in milliseconds for how long DOUT should be active.

DOUT OFF Duration (ms) defines value in milliseconds for how long DOUT should be inactive.

The screenshot displays the configuration interface for the FMB641 device. On the left, a vertical sidebar contains a list of menu items, with 'Manual Geofence Settings' highlighted in blue. The main content area on the right shows a 'Set keyword' section with a 'Keyword' label and an empty text input field.

Security
System
GPRS
Data Acquisition
SMS \ Call Settings
SMS Events
GSM Operators
Features
Accelerometer Features
Auto Geofence
Manual Geofence Settings
Manual Geofence Zones
Trip \ Odometer
Bluetooth
iButton List
I/O
LVCAN
FMS IO
Manual CAN IO
Tachograph Data
RS232 \ RS485
CAN \ Tachograph

Set keyword

Keyword