

FMB920 Security info

[Main Page](#) > [Basic Trackers](#) > [FMB920](#) > [FMB920 Configuration](#) > **FMB920 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB920 Security info web interface. The top navigation bar includes options like 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. The main content area is divided into sections: 'Device Info' (showing device name, start time, power voltage, storage, and battery status), 'GNSS Info' (showing GNSS status, satellite visibility, and location data), 'GSM Info', 'I/O Info', and 'Maintenance'. The sidebar on the left contains various configuration options such as 'Status', 'Security', 'System', 'GPRS', 'Data Acquisition', 'SMS \ Call Settings', 'GSM Operators', 'Features', 'Accelerometer Features', 'Auto Geofence', 'Manual Geofence', 'Trip \ Odometer', 'Bluetooth', 'Bluetooth 4.0', 'Beacon List', 'I/O', and 'OBD II'. The bottom of the interface features social media icons and a settings gear.

*Please note that This feature will only show up in configurator when device is connected to a computer.