

FMC001 Security info

[Main Page](#) > [OBD Trackers](#) > [FMC001](#) > [FMC001 Configuration](#) > **FMC001 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the 'Security' section of the Teltonika FMC001 web interface. The top navigation bar includes links for 'Status', 'Security', 'System', 'GPRS', 'Data Acquisition', 'SMS \ Call Settings', 'GSM Operators', 'Features', 'Accelerometer Features', 'Auto Geofence', 'Manual Geofence', 'Trip \ Odometer', 'Bluetooth', 'Bluetooth 4.0', 'Beacon List', 'I/O', and 'OBD II'. The main content area is divided into several sections: 'Device Info' showing details like Device Name, Last Start Time, Power Voltage, Ext Storage, and Battery Voltage; 'GNSS Info' with sub-tabs for 'GNSS Status', 'GSM Info', 'I/O Info', and 'Maintenance'; 'Satellites' showing visible and in-use satellites (GPS, GLONASS, BeiDou, Galileo); and 'Location' showing Latitude/Longitude, Altitude, HDOP, Speed, Angle, and PDOP. The bottom of the interface features social media icons and a settings gear.

Device Info	
Device Name	31/12/2003 06:00:18 p. m.
Last Start Time	Power Voltage
31/12/2003 06:00:18 p. m.	17105 mV.
Ext Storage (used/total)	Battery Voltage
0 / 122 MB Format	0 mV.
Firmware Version	RTC Time
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.
Device IMEI	Device Uptime
356633000000000	00:00:47
Internal Battery Status	
Not Charging 0%	

GNSS Status	
Module Status	GNSS Packets
ON	32
Fix Status	Fix Time
No fix	00:00:00

Visible:	
GPS	GLONASS
4	0
BeiDou	Galileo
0	0
Total In View	
4	

In Use:	
GPS	GLONASS
0	0
BeiDou	Galileo
0	0
Total In Use	
0	

Location	
Latitude/Longitude	Altitude
0, 0	0
Speed	Angle
0 km/h	0°
PDOP	
0	

*Please note that This feature will only show up in configurator when device is connected to a computer.