

# FMC00A LED status

[Main Page](#) > [OBD Trackers](#) > [FMC00A](#) > [FMC00A Manual](#) > **FMC00A LED status**

This section is an explanation of LED indications on an FMC00A device.

## Navigation LED Indications

| Behaviour                       | Meaning                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------|
| <b>Permanently switched on</b>  | GNSS signal is not received                                                           |
| <b>Blinking every second</b>    | Normal mode, GNSS is working                                                          |
| <b>Off</b>                      | GNSS is turned off because:<br>Device is not working<br>or<br>Device is in sleep mode |
| <b>Blinking fast constantly</b> | Device firmware is being flashed                                                      |

## Status LED Indications

| Behaviour                             | Meaning                                               |
|---------------------------------------|-------------------------------------------------------|
| <b>Blinking every second</b>          | Normal mode                                           |
| <b>Blinking every two seconds</b>     | Sleep mode                                            |
| <b>Blinking fast for a short time</b> | Modem activity                                        |
| <b>Off</b>                            | Device is not working<br>or<br>Device is in boot mode |