

FMC125 SMS/Call settings

[Main Page](#) > [Professional Trackers](#) > [FMM125](#) > [FMC125 Configuration](#) > **FMC125 SMS/Call settings**



Contents

- [1 SMS Data Sending](#)
- [2 SMS commands](#)

SMS Data Sending

These settings allow sending AVL data using binary SMS. AVL data will be sent by SMS only when there is no GPRS connection. This setting does not affect replies to SMS request messages – answers are always sent back to the sender's telephone number.

The screenshot displays the FMC125 configuration web interface. At the top, there is a navigation bar with the Teltonika logo and a sidebar menu on the left containing various configuration categories like Status, Security, System, GPRS, Data Acquisition, and SMS \ Call Settings (which is currently selected). The main content area is divided into three sections: 'SMS Data Sending', 'SMS Commands', and 'Incoming Call Settings'. The 'SMS Data Sending' section includes a toggle for 'Allow SMS Data Sending' (currently set to 'Disable'), a 'Data Send Number' field, and a 'Data Send Time Zone' dropdown menu. The 'SMS Commands' section has fields for 'Login' and 'Password', and a 'SMS Event Time Zone' dropdown menu. The 'Incoming Call Settings' section includes a toggle for 'Incoming Call Action' (currently set to 'Do Nothing') and a 'Report Position' checkbox. To the right of these settings are two large tables: 'Authorized Numbers' and 'GSM Predefined Numbers', both with 20 rows and 'Import CSV'/'Export CSV' buttons at the bottom. The top right corner of the interface shows device information: IMEI 352000000000000, FW 01.00.00 Rev:00, and Configuration 1.00.0.0.

SMS commands

Essential fields in *SMS/Call settings* are *Login* and *Password*. The login and password are used with every SMS sent to FMC125. If login and password are not set, in every SMS sent to FMC125 device two spaces before command have to be used (<space><space><command>).

Command structure with set login and password:

<login><space><password><space><command>, for example: "asd 123 getgps"

Phone numbers have to be written in international standard, using "+" is optional but not necessary (in both cases number will be recognized, but when number is without "+" symbol, IDD Prefix will not be generated, which depends on location of the phone). If no numbers are entered, configuration and sending commands over SMS are allowed from all GSM numbers.