

FMC150 SMS/GPRS Commands

[Main Page](#) > [CAN Trackers & Adapters](#) > [FMC150](#) > [FMC150 Manual](#) > **FMC150 SMS/GPRS Commands**

Commands apply for these devices:

[FMB001](#) [FMB010](#) [FMB002](#) [FMB020](#) [FMB003](#) [FMB110](#) [FMB120](#) [FMB122](#) [FMB125](#) [FMB130](#) [FMB202](#) [FMB204](#) [FMB208](#) [FMB900](#) [FMB920](#) [FMB962](#) [FMB964](#) [FM3001](#) [FMT100](#) [FMC001](#) [FMC003](#) [FMC00A](#) [FMM001](#) [FMM003](#) [FMM00A](#) [FMC125](#) [FMC130](#) [FMC150](#) [FMM125](#) [FMM130](#) [FMM150](#) [FMU125](#) [FMU126](#) [FMU130](#) [MTB100](#) [FMB140](#)

All commands are case sensitive. When user tries to send SMS/GPRS message to device that operates in Deep Sleep mode, it cannot arrive to it because the GSM/GPRS module is disabled most of the time. Device will receive the SMS message when it exits Deep Sleep mode, but GPRS commands will not be received after exiting Deep Sleep Mode.

If the device is in GPS Sleep or Online Deep Sleep mode, sent SMS/GPRS message will arrive to the device.

SMS command structure:

<SMS login><space><SMS password><space><command><space><value>

SMS command [getinfo](#) example:

- If you have set SMS login and password: login pass getinfo
- If SMS login and password are not set leave two spaces before command: getinfo

GPRS commands require [Codec 12](#) protocol.

□

Contents

- [1 Commands apply for these devices:](#)
- [2 Common commands](#)
- [3 Bluetooth® Commands](#)
- [4 Commands Related to Features](#)
- [5 OBD Commands](#)
- [6 CAN Adapter Commands](#)

To search for compatible products, [Expand all content](#)

Common commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
getinfo	Device runtime system information.	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
getver	Returns code version, device IMEI, modem app version, RTC time, Init time, Uptime and BT MAC address.	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
getstatus	Modem Status information.	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
getgps	Current GPS data, date and time.	Yes	Common commands	
getio	Readout analog input,digital input and output.	Yes	Common commands	
ggps	Returns location information with Google maps link.	Yes	Common commands	

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
radio #	Returns IO status, # AVL ID.	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
cpureset	Resets device	No	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
fwstats	Get data about FW and restarts	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
getrecord	SMS command initiates saving and sending of high priority record.	No	Common commands	
getimeiccid #	Response is sent to SMS/GPRS command sender and also to GSM number provided. # - GSM number using international format e.g. 37069012345	Yes	Common commands	
getimsi	Sends the IMSI number of the SIM card inserted as a response to the sender. If two SIM cards are inserted in the device, the response will be the IMSI number of the currently active SIM card. Note: This command is supported from 03.10.02 firmware version.	Yes	Common commands	

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250
allver	Responds with information about hardware and firmware versions and storage space	Yes		Common commands
getparam #	Returns selected parameter value. # - first ID value . # - second ID value . # - third ID value . SMS command is limited to 160 characters.	Yes		Common commands
getparam #;#;...				
setparam #:#				
	Sets selected parameter value [Parameter ID] : [New Parameter Value] ; [Parameter ID] : [New Parameter Value]... SMS command is limited to 160 characters.	Yes		Common commands
setparam #:#;#;#;...				

flush #,#,#,#,#,#	<p>Redirects device to other server.</p> <p>1.# - IMEI. 2.# - APN. 3.# - LOGIN. 4.# - PASS. 5.# - IP. 6.# - PORT. 7.# - MODE (0-TCP/1-UDP).</p>	Yes	<p>Common commands</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p>
countrecs	Returns records number.	Yes	<p>Common commands</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p>
web_connect	Forces device to connect to Fota WEB immediately.	Yes	<p>Common commands</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p>

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB900 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB209 FMC125 FMM125 FMT125 FMC130 FMM130 FMT130 FMT126 MSP500 FMBXXX FMB001 FMC001 FMM001 FMB002 FMB003 FMB010 FMB020 FMB120 FMB122 FMB125 FMB130 FMB140 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB208 FMB209 FMC125 FMM125 FMT125 FMT126 FMC130 FMM130 FMT130 MSP500 FMT100 FMP100 FMC800 FMM800 FMM80A
deletereconds	Delete all records from SD card.	Yes		Common commands
setdigout ## Y1 Y2 Z1 Z2	Set digital output. 1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1. 2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2. Y1 - timeout value for DOUT1 if needed (in seconds). Y2 - timeout value for DOUT2 if needed (in seconds). Z1 - maximum speed value for DOUT1 if needed. Z2 - maximum speed value for DOUT2 if needed.	Yes		Common commands
battery	Returns battery state info.	Yes		Common commands

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
wdlog	Returns all information about 'watch dogs'	Yes	Common commands		
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
defaultcfg	Load default configuration.	Yes	Common commands		
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
setkey # #	Add new or change current configuration keyword. If device is locked, keyword cannot be changed. 1.# - old keyword (if adding new keyword space). 2.# - new keyword.	Yes	Common commands		

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
delkey #	Remove existing keyword (If device is locked, keyword cannot be changed). # - old keyword.	Yes	Common commands	
bbread #	Return black box information (HEX value of event ID and HEX value of custom data field (optional)). # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes	Common commands	
bbinfo #	Return same information as bbread command but additional all events timestamp is written in HEX. # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes	Common commands	

			FMBXXX	
			FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
<i>sdformat</i>	Format SD card.	Yes		Common commands

Bluetooth® Commands

Command	Description	Response	HW Support	Parameter Group
			FMBXXX FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
btgetlist #	Returns requested Bluetooth® list. # - 0,1 or 2 (0 - Discovered, 1 - Paired, 2 - Connected, 3 - Discovered BT4/BLE devices).	Yes	FMBXXX FMB001	Bluetooth® commands
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
<i>btscan</i>	Starts Bluetooth® scan.	Yes		Bluetooth® commands

<i>btvisible #</i>	Sets Bluetooth® to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Yes	FMBXXX FMB001	Bluetooth® commands
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
			FMBXXX FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
<i>btrelease #</i>	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Yes	FMBXXX FMB001	Bluetooth® commands
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
			FMBXXX FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
<i>btunpair #</i>	Unpair Bluetooth® device. # - all, BT address (all - unpair all devices, BT address - unpair only specified MAC address).	Yes	FMBXXX FMB001	Bluetooth® commands
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
			FMBXXX FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	

Commands Related to Features

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
fc_reset	Resets fuel consumption parameters.	Yes		Commands related to features	
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
towingreact	Towing reactivation.	Yes		Commands related to features	
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
auto_calibrate:get	Returns the state of calibration.	Yes		Commands related to features	
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
odoset:#	Set total odometer value. # - new odometer value in km.	Yes		Commands related to features	
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250		
odoget	Display current odometer value.	Yes		Commands related to features		
				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250		
on_demand_trackingX	X=0 - Stops Tracking on Demand functionality. X=1 - Starts Tracking on Demand functionality. X=2 - Generates one high priority record and initiates data sending to server. Note: This command is supported from 03.25.06 firmware version.	Yes		Commands related to features		

OBD Commands

Command	Description	Response	HW Support	Parameter Group
obdinfo	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth®OBD dongle. Response displays all available information from OBD.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
faultcodes	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth®OBD dongle. Response displays all visible fault codes.	Yes		OBD Commands	
<i>cleardtc</i>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth®OBD dongle. Command clears all vehicle stored fault codes.	Yes		OBD Commands	
<i>getvin</i>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth®OBD dongle. Response displays vehicle VIN code.	Yes		OBD Commands	

CAN Adapter Commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

lvcangetinfo	<p>UniqID: 0031C22F41400014000535305039594D53, FWVer: 00010000, BLVer: 00000300, GIT-SHA1: 2490222, Rev: 0, FW date: 2022-05-16, Kernel: 473, Option: 01</p> <p>Explanation of values: UniqID - contains the unique ID of the CAN MCU, generated from internal registers</p> <p>FWVer - CAN MCU firmware version. Example: 00010000here 00 - BRANCH version, 01 - MAJOR version, 00 - MINOR version, 00 - PATCH version</p>	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanreset #	This command forces CAN adapter reset. Note: This command is supported from 03.25.16.Rev.281 firmware version.	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
oeminfo	<p>Vehicle: Mazda/6 FL2/2019, GenTime: 1970-1-1 0:0:0, LS:0, DB:0, DBG:0, LE:41, FVer:1</p> <p>Explanation of values: Vehicle - contains the vehicle, the OEM CAN file is intended forGenTime - contains the CAN OEM file generation date/time</p>	Yes	FMBXXX FMB150	CAN Adapter Commands
lvcancheck	This command reports CAN lines connection information.	Yes	FMC150	CAN Adapter Commands