

FMC640 Security info

[Main Page](#) > [Professional Trackers](#) > [FMC640](#) > [FMC640 Configuration](#) > **FMC640 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMC640 configurator interface. The top navigation bar includes the Teltonika logo and a series of buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. On the right, a SIM card icon is shown with details: IMEI 868888888888888, FW 03.25.15 Rev: 1.0, and Configuration 6.1.17.0.

The left sidebar contains a menu with the following items: Status, Security (selected), System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II.

The main content area is titled 'Device Info' and displays the following data:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.

Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	356623402601000	00:00:47	Not Charging 0%

Below the 'Device Info' section, there are tabs for 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' tab is active, showing 'GNSS Status' and 'Satellites'.

GNSS Status

Module Status	GNSS Packets
ON	32

Fix Status	Fix Time
No fix	00:00:00

Satellites

Visible:		In Use:	
GPS	GLONASS	GPS	GLONASS
4	0	0	0
BeiDou	Galileo	BeiDou	Galileo
0	0	0	0
Total In View		Total In Use	
4		0	

Location

Latitude/Longitude	Altitude	HDOP
0, 0	0	0

Speed	Angle	PDOP
0 km/h	0°	0

*Please note that This feature will only show up in configurator when device is connected to a computer.