

FMC880 SMS/Call settings

[Main Page](#) > [Fast & Easy Trackers](#) > [FMC880](#) > [FMC880 Configuration](#) > **FMC880 SMS/Call settings**

SMS Data Sending

These settings allow sending AVL data using binary SMS. AVL data will be sent by SMS only when there is no GPRS connection. This setting does not affect replies to SMS request messages - answers are always sent back to the sender's telephone number.

TELTONIKA

Load from device | Save to device | Update firmware | Reset configuration | Load from file | Save to file | Read records | Reboot device

SMS Data Sending

Allow SMS Data Sending: **Disable** | **Enable**

Data Send Number:

SMS Commands

Login: Password:

SMS Event Time Zone: UTC+00:00

Incoming Call Settings

Incoming Call Action: **Do Nothing** | **Hang-up** | **Report Position**

Authorized Numbers

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	

Import CSV | Export CSV

GSM Predefined Numbers

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

Import CSV | Export CSV

SMS commands

Essential fields in *SMS/Call settings* are *Login* and *Password*. The login and password are used with every SMS sent to FMC880. If login and password are not set, in every SMS sent to FMC880 device two spaces before command have to be used (<space><space><command>).

Command structure with set login and password:

<login><space><password><space><command>, for example: "asd 123 getgps"

Phone numbers have to be written in international standard, using "+" is optional but not necessary (in both cases number will be recognized, but when number is without "+" symbol, IDD Prefix will not be generated, which depends on location of the phone). If no numbers are entered, configuration and sending commands over SMS are allowed from all GSM numbers.