

FMM640 SMS events

[Main Page](#) > [EOL Products](#) > [FMM640](#) > [FMM640 Configuration](#) > **FMM640 SMS events**

SMS events functionality allows FMM640 to send a configured SMS when an event is triggered. This event can be triggered by every I/O element.

When any of the I/O elements is triggered, FMM640 sends a configured SMS message to a defined phone number.



FMM640 is able to send SMS messages to Predefined phone numbers (recipients) if any of selected events are triggered. User can send SMS alert message of selected event to maximum 10 predefined phone numbers. AVL ID of parameter has to be entered in configuration to receive its SMS event. Predefined phone numbers must be entered in SMS Events Numbers list in 'SMS \ Call Settings' menu before it will be possible to pair them with AVL ID and SMS event text.

SMS Event Text is used to add additional text to standard SMS event message text.

If FMM640 is in *Deep Sleep* mode and an SMS event occurs with *Low priority* (which does not wake up FMM640), then the device does not send the message. It is saved to device memory until it wakes up from *Deep Sleep* mode and GSM modem starts working normally. After it wakes up, all the messages that are saved to memory will be sent, but keep in mind that only 10 messages can be saved to memory - all other messages will not be saved, until there is free memory space.

