

# FMM650 Auto Geofence settings

[Main Page](#) > [Professional Trackers](#) > [FMM650](#) > [FMM650 Configuration](#) > **FMM650 Auto Geofence settings**



AutoGeofence - the last known position after movement = off. If your car is being taken away - you can be notified. The shape and size of the geofence zones are configurable. There is a possibility to state whether entering in or out of the geofence triggers an asynchronous message. Auto Geofencing option can be configured by following parameters:

- Priority - Priority of generated event, which will be applied to saved record.
- Eventual Records - Scenario status will be (or not, if disabled) sent with each AVL

record. Generate Event:

- On Entrance - Event generation on Geofence entrance.
- On Exit - Event generation on Geofence exit.
- On Both - Event generation on Geofence entrance or exit.
- Activation Timeout - Time period before Geofence is activated after vehicle stops.
- Radius - Radius of circle where in center of it is last coordinates of device when vehicle

engine was running. Deactivate By:

- Ignition - if ignition becomes high it will drop AutoGeofence Zone
- iButton - if iButton is attached it will drop AutoGeofence Zone
- Engine RPM - if engine RPM becomes more than zero it will drop AutoGeofence zone