

FMM650 Security info

[Main Page](#) > [Professional Trackers](#) > [FMM650](#) > [FMM650 Configuration](#) > **FMM650 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMM650 configurator interface. At the top, there is a navigation bar with the Teltonika logo and several utility buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. On the right side of this bar, there is a SIM card icon and information: 'IMEI 869110000000000', 'FW 03.25.15 Rev: 1.0', and 'Configuration 6.1.17.0'. A left sidebar contains a menu with options: 'Status', 'Security', 'System', 'GPRS', 'Data Acquisition', 'SMS \ Call Settings', 'GSM Operators', 'Features', 'Accelerometer Features', 'Auto Geofence', 'Manual Geofence', 'Trip \ Odometer', 'Bluetooth', 'Bluetooth 4.0', 'Beacon List', 'I/O', and 'OBD II'. The main content area is titled 'Device Info' and shows the following data:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	3506030000000000	00:00:47	Not Charging 0%

Below the 'Device Info' section, there are tabs for 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' section is active and contains three sub-sections:

- GNSS Status:** Module Status: ON, GNSS Packets: 32, Fix Status: No fix, Fix Time: 00:00:00.
- Satellites:** Visible: GPS 4, GLONASS 0, BeiDou 0, Galileo 0; In Use: GPS 0, GLONASS 0, BeiDou 0, Galileo 0; Total In View: 4, Total In Use: 0.
- Location:** Latitude/Longitude: 0,0, Altitude: 0, HDOP: 0, Speed: 0 km/h, Angle: 0°, PDOP: 0.

The bottom of the interface features social media icons (Facebook, YouTube, Twitter, LinkedIn, etc.) and a settings gear icon.

*Please note that This feature will only show up in configurator when device is connected to a computer.