

# FMM80A Security info

[Main Page](#) > [Fast & Easy Trackers](#) > [FMM80A](#) > [FMM80A Configuration](#) > **FMM80A Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

**TELTONIKA**

Load from device Save to device Update firmware Reset configuration  
Load from file Save to file Read records Reboot device

IMEI: 3566030600001000 FW: 03.25.15 Rev: 1.0 Configuration: 6.1.17.0

### Device Info

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB <a href="#">Format</a>	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	3566030600001000	00:00:47	Not Charging 0%

### GNSS Info

[GNSS Info](#) [GSM Info](#) [I/O Info](#) [Maintenance](#)

#### GNSS Status

Module Status	GNSS Packets
ON	32
Fix Status	Fix Time
No fix	00:00:00

#### Satellites

Visible:		In Use:	
GPS	GLONASS	GPS	GLONASS
4	0	0	0
BeiDou	Galileo	BeiDou	Galileo
0	0	0	0
Total In View		Total In Use	
4		0	

#### Location

Latitude/Longitude	Altitude	HDOP
0,0	0	0
Speed	Angle	PDOP
0 km/h	0°	0

\*Please note that This feature will only show up in configurator when device is connected to a computer.