

FMM880 Security info

[Main Page](#) > [Fast & Easy Trackers](#) > [FMM800](#) > [FMM880 Configuration](#) > **FMM880 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMM880 Security info web interface. The top navigation bar includes the Teltonika logo and a series of buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. A status bar on the right shows the IMEI, FW 03.25.15 Rev: 1.0, and Configuration 6.1.17.0.

The main content area is divided into several sections:

- Device Info:** Displays various device parameters including Device Name, Last Start Time (31/12/2003 06:00:18 p. m.), Power Voltage (17105 mV), Ext Storage (used/total) (0 / 122 MB), Battery Voltage (0 mV), Firmware Version (03.25.15 Rev: 1.0), RTC Time (31/12/2003 06:01:05 p. m.), Device IMEI (356633060000000), Device Uptime (00:00:47), and Internal Battery Status (Not Charging 0%).
- GNSS Info:** Includes tabs for GSM Info, I/O Info, and Maintenance.
- GNSS Status:** Shows Module Status (ON), GNSS Packets (32), Fix Status (No fix), and Fix Time (00:00:00).
- Satellites:** Divided into Visible and In Use sections. Visible satellites include GPS (4), GLONASS (0), BeiDou (0), and Galileo (0). In Use satellites include GPS (0), GLONASS (0), BeiDou (0), and Galileo (0). Total In View is 4, and Total In Use is 0.
- Location:** Displays Latitude/Longitude (0, 0), Altitude (0), HDOP (0), Speed (0 km/h), Angle (0°), and PDOP (0).

The bottom of the interface features a social media bar with icons for Facebook, YouTube, Twitter, Instagram, LinkedIn, and a QR code, along with a settings gear icon.

*Please note that This feature will only show up in configurator when device is connected to a computer.