

FMU125 SMS/GPRS Commands

[Main Page](#) > [EOL Products](#) > [FMU125](#) > [FMU125 Manual](#) > **FMU125 SMS/GPRS Commands**

Commands apply for these devices:

[FMB001](#) [FMB010](#) [FMB002](#) [FMB020](#) [FMB003](#) [FMB110](#) [FMB120](#) [FMB122](#) [FMB125](#) [FMB130](#) [FMB202](#) [FMB204](#) [FMB208](#) [FMB900](#) [FMB920](#) [FMB962](#) [FMB964](#) [FM3001](#) [FMT100](#) [FMC001](#) [FMC003](#) [FMC00A](#) [FMM001](#) [FMM003](#) [FMM00A](#) [FMC125](#) [FMC130](#) [FMM125](#) [FMM130](#) [FMU125](#) [FMU126](#) [FMU130](#) [MTB100](#) [FMB140](#)

All commands are case sensitive. When user tries to send SMS/GPRS message to device that operates in Deep Sleep mode, it cannot arrive to it because the GSM/GPRS module is disabled most of the time. Device will receive the SMS message when it exits Deep Sleep mode, but GPRS commands will not be received after exiting Deep Sleep Mode.

If the device is in GPS Sleep or Online Deep Sleep mode, sent SMS/GPRS message will arrive to the device.

SMS command structure:

<SMS login><space><SMS password><space><command><space><value>

SMS command [getinfo](#) example:

- If you have set SMS login and password: login pass getinfo
- If SMS login and password are not set leave two spaces before command: getinfo

GPRS commands require [Codec 12](#) protocol.

□

Contents

- [1 Commands apply for these devices:](#)
- [2 Common commands](#)
- [3 Bluetooth Commands](#)
- [4 Commands Related to Features](#)
- [5 OBD Commands](#)
- [6 CAN Adapter Commands](#)

To search for compatible products, [Expand all content](#)

Common commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
getinfo	Device runtime system information.	Yes	Common commands		
getver	Returns code version, device IMEI, modem app version, RTC time, Init time, Uptime and BT MAC address.	Yes	Common commands		
getstatus	Modem Status information.	Yes	Common commands		

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
getgps	Current GPS data, date and time.	Yes	Common commands		
getio	Readout analog input,digital input and output.	Yes	Common commands		
ggps	Returns location information with Google maps link.	Yes	Common commands		

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
readio #	Returns IO status, # AVL ID.	Yes		Common commands	
cpureset	Resets device	No		Common commands	
fwstats	Get data about FW and restarts	Yes		Common commands	

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
getrecord	SMS command initiates saving and sending of high priority record.	No	Common commands	
getimeiccid #	Response is sent to SMS/GPRS command sender and also to GSM number provided. # - GSM number using international format e.g. 37069012345	Yes	Common commands	
getimsi	Sends the IMSI number of the SIM card inserted as a response to the sender. If two SIM cards are inserted in the device, the response will be the IMSI number of the currently active SIM card. Note: This command is supported from 03.10.02 firmware version.	Yes	Common commands	

[getops](#)

Returns list of all currently visible operators.

Yes

Common commands

[allver](#)

Responds with information about hardware and firmware versions and storage space

Yes

Common commands

[getparam](#) #

Returns selected parameter value.
- first [ID value](#). # - second [ID value](#). # - third [ID value](#).
SMS command is limited to 160 characters.

Yes

Common commands

[getparam](#) #;#;...

FMBXXX
[FMB001](#)
[FMC001](#)
[FMB010](#)
[FMB110](#)
[FMB120](#)
[FMB122](#)
[FMB125](#)
[FMB130](#)
[FMB140](#)
[FMB150](#)
[FMC150](#)
[FMM150](#)
[FMB900](#)
[FMB920](#)
[FMB202](#)
[FMB204](#)
[FMB206](#)
[FMT100](#)
[FMP100](#)
[FMC001](#)
[FMC125](#)
[FMC130](#)
[FMM001](#)
[FMM125](#)
[FMM130](#)
[FMC800](#)
[FMM800](#)
[FMM80A](#)
[FMC880](#)
[FMM880](#)
FMBXXX
[FMB001](#)
[FMC001](#)
[FMB010](#)
[FMB110](#)
[FMB120](#)
[FMB122](#)
[FMB125](#)
[FMB130](#)
[FMB140](#)
[FMB150](#)
[FMC150](#)
[FMM150](#)
[FMB900](#)
[FMB920](#)
[FMB202](#)
[FMB204](#)
[FMB206](#)
[FMT100](#)
[FMP100](#)
[FMC001](#)
[FMC125](#)
[FMC130](#)
[FMM001](#)
[FMM125](#)
[FMM130](#)
[FMC800](#)
[FMM800](#)
[FMM80A](#)
[FMC880](#)
[FMM880](#)
FMBXXX
[FMB001](#)
[FMC001](#)
[FMB010](#)
[FMB110](#)
[FMB120](#)
[FMB122](#)
[FMB125](#)
[FMB130](#)
[FMB140](#)
[FMB150](#)
[FMC150](#)
[FMM150](#)
[FMB900](#)
[FMB920](#)
[FMB202](#)
[FMB204](#)
[FMB206](#)
[FMT100](#)
[FMP100](#)
[FMC001](#)
[FMC125](#)
[FMC130](#)
[FMM001](#)
[FMM125](#)
[FMM130](#)
[FMC800](#)
[FMM800](#)
[FMM80A](#)
[FMC880](#)
[FMM880](#)

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880
setparam #:#	Sets selected parameter value [Parameter ID] : [New Parameter Value] ; [Parameter ID] : [New Parameter Value]... SMS command is limited to 160 characters.	Yes	Common commands	
setparam #:#;#:#;...				

				FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB900 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB209 FMC125 FMM125 FMU125 FMC130 FMM130 FMU130 FMU126 MSP500 FMBXXX FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB900 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB209 FMC125 FMM125 FMU125 FMC130 FMM130 FMU130 FMU126 MSP500	
web_connect	Forces device to connect to Fota WEB immediately.	Yes		Common commands	
deleterecords	Delete all records from SD card.	Yes		Common commands	
setdigout ## Y1 Y2 Z1 Z2	Set digital output. 1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1. 2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2. Y1 - timeout value for DOUT1 if needed (in seconds). Y2 - timeout value for DOUT2 if needed (in seconds). Z1 - maximum speed value for DOUT1 if needed. Z2 - maximum speed value for DOUT2 if needed.	Yes		Common commands	
setindigout ### Y1 Y2 Y3	Set digital output when ignition is off. 1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1. 2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2. 3.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT3. Y1 - timeout value for DOUT1 if needed (in seconds). Y2 - timeout value for DOUT2 if needed (in seconds). Y3 - timeout value for DOUT3 if needed (in seconds).	Yes		Common commands	

battery	Returns battery state info.	Yes	FMBXXX	Common commands
			FMB001	
			FMC001	
			FMM001	
			FMB002	
			FMB003	
			FMB010	
			FMB020	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB910	
			FMB920	
			FMB962	
			FMB964	
			FMB202	
			FMB204	
			FMB208	
			FMB209	
			FMC125	
			FMM125	
			FMI125	
			FMI126	
			EMC130	
			FMM130	
			FMI130	
			MSP500	
			FMT100	
			FMP100	
			FMC800	
			FMM800	
			FMM80A	
			FMBXXX	
			FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			EMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMBXXX	
			EMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
setkey # #	Add new or change current configuration keyword. If device is locked, keyword cannot be changed. 1.# - old keyword (if adding new keyword space). 2.# - new keyword.	Yes	Common commands	
delkey #	Remove existing keyword (If device is locked, keyword cannot be changed). # - old keyword.	Yes	Common commands	
bbread #	Return black box information (HEX value of event ID and HEX value of custom data field (optional)). # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes	Common commands	

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
bbinfo #	Return same information as bbread command but additional all events timestamp is written in HEX. # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes		Common commands
sdformat	Format SD card.	Yes		Common commands

Bluetooth Commands

Command	Description	Response	HW Support	Parameter Group
			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
btgetlist #	Returns requested Bluetooth list. # - 0,1 or 2 (0 - Discovered, 1 - Paired, 2 - Connected, 3 - Discovered BT4/BLE devices).	Yes		Bluetooth commands

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
<i>btscan</i>	Starts Bluetooth scan.	Yes	Bluetooth commands	
			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
<i>btvisible #</i>	Sets Bluetooth to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Yes	Bluetooth commands	
			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
<i>btrelease #</i>	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Yes	Bluetooth commands	
			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	

					FMBXXX FMB001	
					FMC001	
					FMB010	
					FMB110	
					FMB120	
					FMB122	
					FMB125	
					FMB130	
					FMB140	
					FMB150	
					FMC150	
					FMM150	
					FMB900	
					FMB920	
					FMB202	
					FMB204	
					FMB206	
					FMT100	
					FMP100	
					FMC001	
					FMC125	
					FMC130	
					FMM001	
					FMM125	
					FMM130	
					FMC800	
					FMM800	
					FMM80A	
					FMC880	
					FMM880	

btunpair #

Unpair Bluetooth device.

- all, BT address (all - unpair all devices, BT address - unpair only specified MAC address).

Yes

Bluetooth commands

Commands Related to Features

					FMBXXX FMB001	
					FMC001	
					FMB010	
					FMB110	
					FMB120	
					FMB122	
					FMB125	
					FMB130	
					FMB140	
					FMB150	
					FMC150	
					FMM150	
					FMB900	
					FMB920	
					FMB202	
					FMB204	
					FMB206	
					FMT100	
					FMP100	
					FMC001	
					FMC125	
					FMC130	
					FMM001	
					FMM125	
					FMM130	
					FMC800	
					FMM800	
					FMM80A	
					FMC880	
					FMM880	

Command

Description

Response

HW Support

Parameter Group

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
fc_reset	Resets fuel consumption parameters.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Commands related to features
towingreact	Towing reactivation.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Commands related to features
auto_calibrate:get	Returns the state of calibration.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Commands related to features
odoset:#	Set total odometer value. # - new odometer value in km.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Commands related to features

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	
odoget	Display current odometer value.	Yes		Commands related to features
go2sleep	Puts device to sleep ignoring going to sleep condition and stays asleep for the set time. Note: This command is supported from 03.27.10.Rev.482 firmware version.	Yes	FMB965 FMB930 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	Commands related to features
on_demand_trackingX	X=0 - Stops Tracking on Demand functionality. X=1 - Starts Tracking on Demand functionality. X=2 - Generates one high priority record and inititates data sending to server. Note: This command is supported from 03.25.06 firmware version.	Yes		Commands related to features

OBD Commands

Command	Description	Response	HW Support	Parameter Group
obdinfo	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all available information from OBD.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880	OBD Commands

faultcodes	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all visible fault codes.	Yes	OBD Commands	FMBXXX
				FMB001
				FMC001
				FMB010
				FMB110
				FMB120
				FMB122
				FMB125
				FMB130
				FMB140
				FMB150
				FMC150
				FMM150
				FMB900
				FMB920
				FMB202
				FMB204
				FMB206
				FMT100
				FMP100
				FMC001
				FMC125
				FMC130
				FMM001
				FMM125
				FMM130
				FMC800
				FMM800
				FMM80A
				FMC880
				FMM880
				FMBXXX
				FMB001
				FMC001
				FMB010
				FMB110
				FMB120
				FMB122
				FMB125
				FMB130
				FMB140
				FMB150
				FMC150
				FMM150
				FMB900
				FMB920
				FMB202
				FMB204
				FMB206
				FMT100
				FMP100
				FMC001
				FMC125
				FMC130
				FMM001
				FMM125
				FMM130
				FMC800
				FMM800
				FMM80A
				FMC880
				FMM880
cleardtc	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Command clears all vehicle stored fault codes.	Yes	OBD Commands	FMBXXX
				FMB001
				FMC001
				FMB010
				FMB110
				FMB120
				FMB122
				FMB125
				FMB130
				FMB140
				FMB150
				FMC150
				FMM150
				FMB900
				FMB920
				FMB202
				FMB204
				FMB206
				FMT100
				FMP100
				FMC001
				FMC125
				FMC130
				FMM001
				FMM125
				FMM130
				FMC800
				FMM800
				FMM80A
				FMC880
				FMM880
				FMBXXX
				FMB001
				FMC001
				FMB010
				FMB110
				FMB120
				FMB122
				FMB125
				FMB130
				FMB140
				FMB150
				FMC150
				FMM150
				FMB900
				FMB920
				FMB202
				FMB204
				FMB206
				FMT100
				FMP100
				FMC001
				FMC125
				FMC130
				FMM001
				FMM125
				FMM130
				FMC800
				FMM800
				FMM80A
				FMC880
				FMM880
getvin	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays vehicle VIN code.	Yes	OBD Commands	FMBXXX
				FMB001
				FMC001
				FMB010
				FMB110
				FMB120
				FMB122
				FMB125
				FMB130
				FMB140
				FMB150
				FMC150
				FMM150
				FMB900
				FMB920
				FMB202
				FMB204
				FMB206
				FMT100
				FMP100
				FMC001
				FMC125
				FMC130
				FMM001
				FMM125
				FMM130
				FMC800
				FMM800
				FMM80A
				FMC880
				FMM880
				FMBXXX
				FMB001
				FMC001
				FMB010
				FMB110
				FMB120
				FMB122
				FMB125
				FMB130
				FMB140
				FMB150
				FMC150
				FMM150
				FMB900
				FMB920
				FMB202
				FMB204
				FMB206
				FMT100
				FMP100
				FMC001
				FMC125
				FMC130
				FMM001
				FMM125
				FMM130
				FMC800
				FMM800
				FMM80A
				FMC880
				FMM880

CAN Adapter Commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>lvcansetprog #</i>	Set program number to CAN Adapter # - three to five digit vehicle specific number	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>lvcangetprog</i>	Get program number from CAN Adapter	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
lvcangetinfo	Get information about connected CAN adapter	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>lvcansimpletacho #</i>	Add or remove simpletacho start byte. # - 0 or 1 (0 - don't add start byte, 1 - add start byte).	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
lvcanclear #	Clear Total Mileage (counted), Engine Work Time (counted), Fuel Consumed (counted) parameters values. # - parameter (0 - Engine work time (counted), 1 - Fuel Consumed (counted), 2 - Vehicle Mileage (counted))..	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>allcanmode</i>	Turn on ALL-CAN300 mode.	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>lvcanmode</i>	Turn on LV-CAN200 mode.	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
lvcanfaultcodes	Read DTC fault codes.	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>lvcanopenalldoors</i>	Toggle CAN-CONTROL to open [unlock] all doors	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	
<i>lvcanclosealldoors</i>	Toggle CAN-CONTROL to close [lock] all doors	Yes		CAN Adapter Commands

			FMBXXX FMB110 FMB120 FMB122 FMB125 FMB125 FMC125 FMM125 FMB130 FMB130 FMC130 FMM130	
lvcanopentru	Toggle CAN-CONTROL to open [unlock] trunk	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMB125 FMC125 FMM125 FMB130 FMB130 FMC130 FMM130	
lvcanblockengine	Toggle CAN-CONTROL to block vehicle engine (if command is not supported, please, visit FAQ)	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMB125 FMC125 FMM125 FMB130 FMB130 FMC130 FMM130	
lvcanunblockengine	Toggle CAN-CONTROL to unblock vehicle engine (if command is not supported, please, visit FAQ)	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMB125 FMC125 FMM125 FMB130 FMB130 FMC130 FMM130	
lvcanturninglights	Toggle CAN-CONTROL to flash lights One flash of all turn lights ordered trough accidental / blinking turn light switch	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMB125 FMC125 FMM125 FMB130 FMB130 FMC130 FMM130	
lvcanhorn	Toggle CAN-CONTROL to activate single horn sound	Yes		CAN Adapter Commands
			FMBXXX FMB110 FMB120 FMB122 FMB125 FMB125 FMC125 FMM125 FMB130 FMB130 FMC130 FMM130	
lvcansetting#,#	This command is used to set specific counters for vehicles. From that moment of setting the value, vehicle will continue to count from the specified value. 1.#: 0 - setting total engine work time (seconds) 1 - setting total mileage of the vehicle (km) 2 - resetting total fuel consumption to 0 is available (liters) 3 - setting total CNG use (kg) 4 - setting electric engine work time (seconds) 5 - setting wheel speed sensor impulses (impulses) 2.# - value(0 to 0xFFFFFFFF or ? (? - is used to get the current setting value)) Note: This command is supported from 03.25.15.Rev.145 firmware version.	Yes	FMB140	CAN Adapter Commands
lvcanrefresh	This command forces FMB1YX connection to FOTA WEB to report current CAN adapter status. Note: This command is supported from 03.25.16.Rev.281 firmware version.	Yes	FMB140	CAN Adapter Commands
lvcanreset	This command forces CAN adapter reset. Note: This command is supported from 03.25.16.Rev.281 firmware version.	Yes	FMB140	CAN Adapter Commands
lvcancheck	This command reports CAN lines connection information. Note: This command is supported from 03.25.16.Rev.281 firmware version.	Yes	FMB140	CAN Adapter Commands