

FTC881 LED behaviour description

[Main Page](#) > [Fast & Easy Trackers](#) > [FTC881](#) > [FTC881 Manual](#) > **FTC881 LED behaviour description**

This section is an explanation of LED indications on an FTC881 device.

Navigation LED Indications

Behaviour	Meaning
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sleep mode
Blinking fast constantly	Device firmware is being flashed

Status LED Indications

Behaviour	Meaning
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode