

# How to read data from TZ-BT04/05/05B sensor with Teltonika device



## Contents

- [1 Solution applies for these devices](#)
- [2 Configuration](#)

## Solution applies for these devices



| [TMT250](#) | [GH5200](#) |

## Configuration

These are instructions on how to easily read data from **TZ-BT04/05/05B** Bluetooth® LE sensor with **Teltonika** device.

First the Teltonika device Bluetooth® settings need to be configured. These are the required steps:

- Press Bluetooth® settings.
  - Turn on **BT Radio** by pressing **Enable (hidden)** or **Enable (visible)**.
- Press Bluetooth® 4.0 settings.
  - Select TZ-BT04/05/05B sensor in **BLE connectionless functionalities** section.
  - Type your TZ-BT04/05/05B ID in ID field.
  - After all these steps press **Save to device** to save configuration.
  - To start BLE scan right away press **Discover BLE**.



To check if the Teltonika device has already received data from **TZ-BT04/05/05B** Bluetooth® LE sensor, follow these steps:

- Navigate to **Status** section.
- Press **I/O Info** and look if **BLE Temp**, **BLE Battery** and **BLE Humidity** has any values.