

Inateck BCST-70 Configuration

[Main Page](#) > [Accessories](#) > [Inateck BCST-70 Barcode Scanner](#) > **Inateck BCST-70 Configuration**



Contents

- [1 Configure FM device using Teltonika configurator](#)
- [2 Enable Bluetooth® Pairing](#)
- [3 Scanner Auto Connect Configuration](#)

Configure FM device using Teltonika configurator

1. In System settings, enable Codec8 Extended



2. In GPRS settings, configure GPRS Settings and Server Settings.

3. In Bluetooth® settings,

- Enable Bluetooth®, set this setting as either "Enable (hidden)" or "Enable (visible)", otherwise Bluetooth® will be disabled
- Under Bluetooth® Control, click Discover so it would detect devices within vicinity.

[200px](#)

- Once devices are discovered, select BCST-70-XXXX-SPP then proceed to tick Pair
- After successful pairing, scanner should show under Paired Devices.



NOTE: : *If in case the Scanner is not discovered, do the following steps on Bluetooth® Pairing.*

Enable Bluetooth® Pairing

- a. Scan "Enter Setup"



b. Scan “ Bluetooth® Pairing”

[325px](#)

c. Scan the "Exit with Save" barcode



Scanner Auto Connect Configuration

- Fill up the “Auto Connect To External Device” with as follows:



- Select Connection Mode as, Inateck Scanner.
- Enter the External MAC, can be seen on Paired Devices at the upper left corner.
- Enter the External Name, can be seen on Paired Devices at the lower right corner.
- Enter the External Pin, if the scanner has pin code set otherwise leave as blank.

- Fill up the “Authorized Devices MAC List” same with the External MAC.



NOTE: : *It is important to fill out the auto connect so you won't need to Pair the device again on the Configurator.*

- To receive the data to server enable corresponding BT Status IO element to Low.



NOTE: : *If Scanner is connected BT Status value would be read as 2*